

Easy Assembly



Omni-wheel



Wifi Control



Obstacle Avoidance



Line Tracking

More information: <http://osoyoo.com/?p=49235>

## INTRODUCTION

Mecanum wheels, also known as omni wheels or Ilon wheels, consist of a hub with rollers oriented 45° to the axis of rotation. The mecanum wheels are wheel hubs fitted with integrated rollers that move passively and independently.








Depending on which wheels rotate in which direction, the platform will move forward, backward, sideways, diagonally, or spin in place. This range of maneuverability enables the Omni Platform to efficiently navigate any space, particularly around tight corners, narrow lanes, and complex pathways.

This Arduino Omini Direction Robot Car learning kit is developed our Japan and Canada engineer team. It has all features a traditional Arduino Robot car should have, including remote control by Bluetooth, IoT through Wifi, Line tracking and Obstacle Avoidance auto driving. With the help of powerful Mecanum wheels, the car can make much more complicated movement such as sideway shifting and digaonally movement controlled by Cell phone APP.

The kit comes with OSOYOO mega2560 board (fully compatiable with Arduino Mega2560) and OSOYOO Esp8266 Wifi Shield. Besides, we have designed five step by step lessons which help students to learn Arduino robot programming from scratch. If you are an experience DIY player or Arduino programmer, you can also get a lot of knowledge from this kit's open source code and hardware to make interesting DIY project of your own.

## AUTHORIZED ONLINE RETAILERS

### Mecanum Wheel Robot Car Full Package

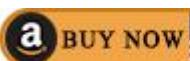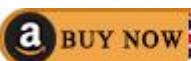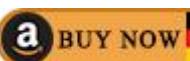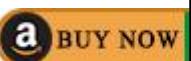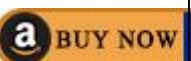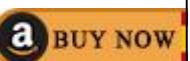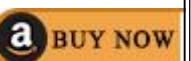Buy from US	Buy from UK	Buy from DE	Buy from IT	Buy from FR	Buy from ES	Buy from JP
 BUY NOW	 BUY NOW	 BUY NOW	 BUY NOW	 BUY NOW	 BUY NOW	 BUY NOW

## 目录

Lesson 1 Basic Robot Car Assembling.....	- 1 -
Lesson 2 Obstacle Avoidance Robot Car.....	- 20 -
Lesson 3 Line Following Robot Car.....	- 28 -
Lesson 4 Bluetooth Controlled Imitation Driving.....	- 34 -
Lesson 5 Wifi Controlled Robot Car.....	- 40 -
Lesson 6 Object follow Robot Car.....	- 52 -

# Lesson 1 Basic Robot Car Assembling

## OBJECTIVE

Mecanum Omni wheel is a very powerful wheel technology which allows robot car make omni-directional movement (parallel shift to left and right).

In this project, we will show how to use Arduino to control an OSOYOO Brand mecanum wheel robot car.

## PARTS & DEVICES

OSOYOO Mecanum Wheels Robotic Car Chassis x 1 (2x left-wheels/2x right-wheels and 4x Motor)

OSOYOO MEGA2560 board fully compatible with Arduino


OSOYOO Wifi Shield x 1


OSOYOO Model Y motor driver x 1

OSOYOO battery box x 1

18650 Batteries x2


### Specifications:

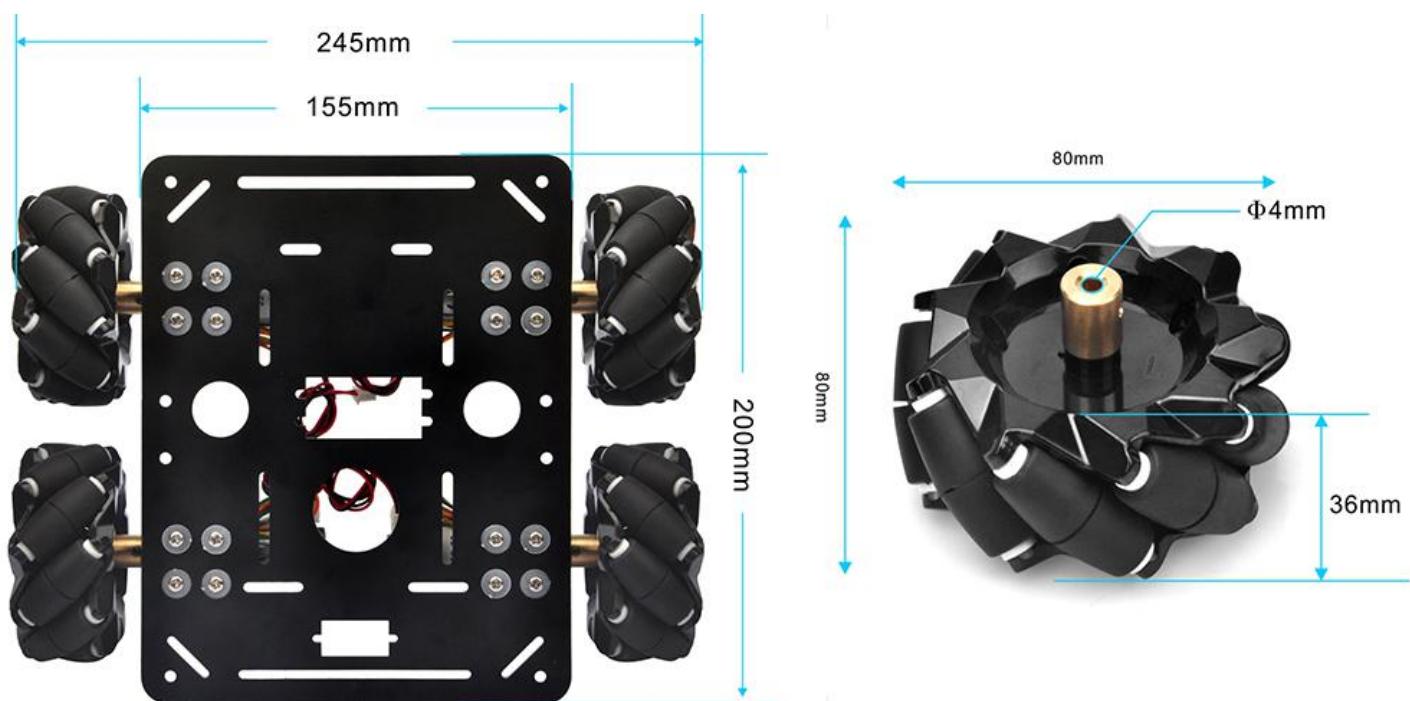

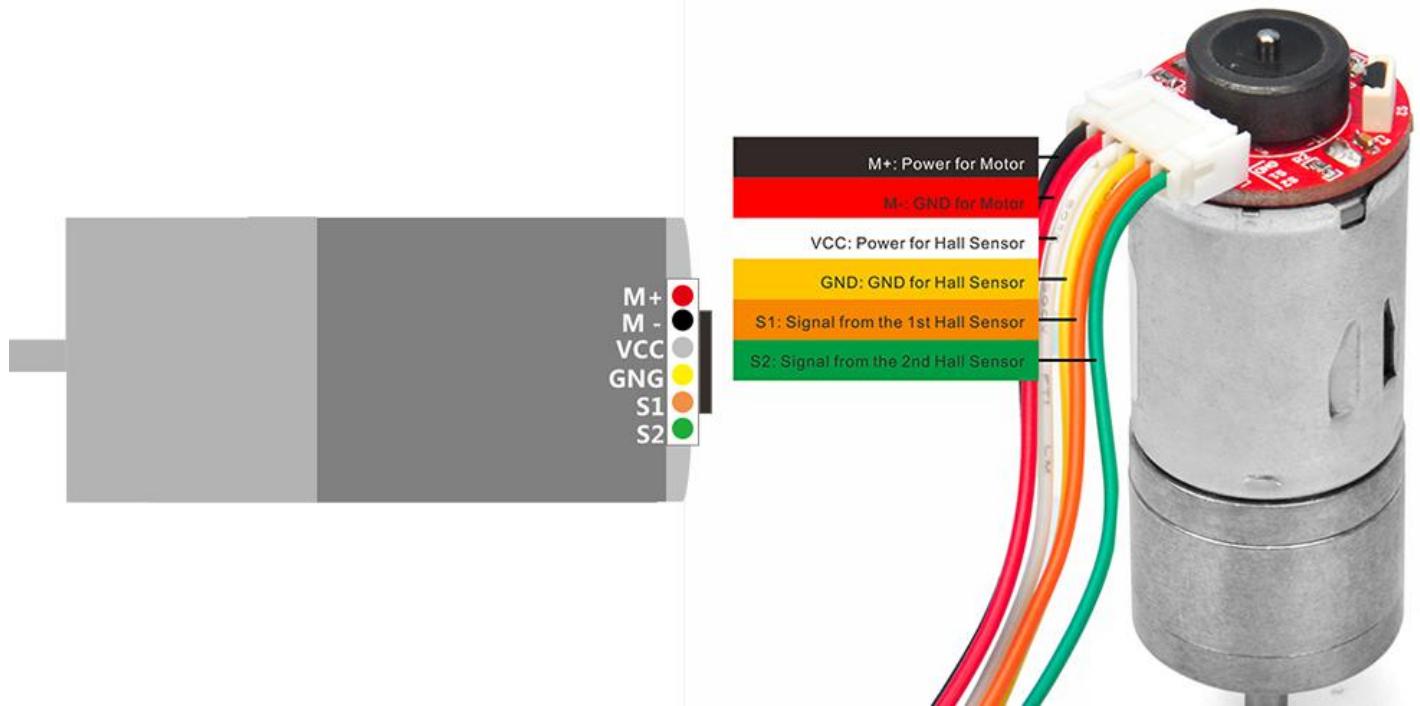


## HARDWARE INSTALLATION

Step1. Install the metal holder on metal chassis with 16pcs M3.5\*12 screws, M3.5 rubber rings and M3.5 nuts

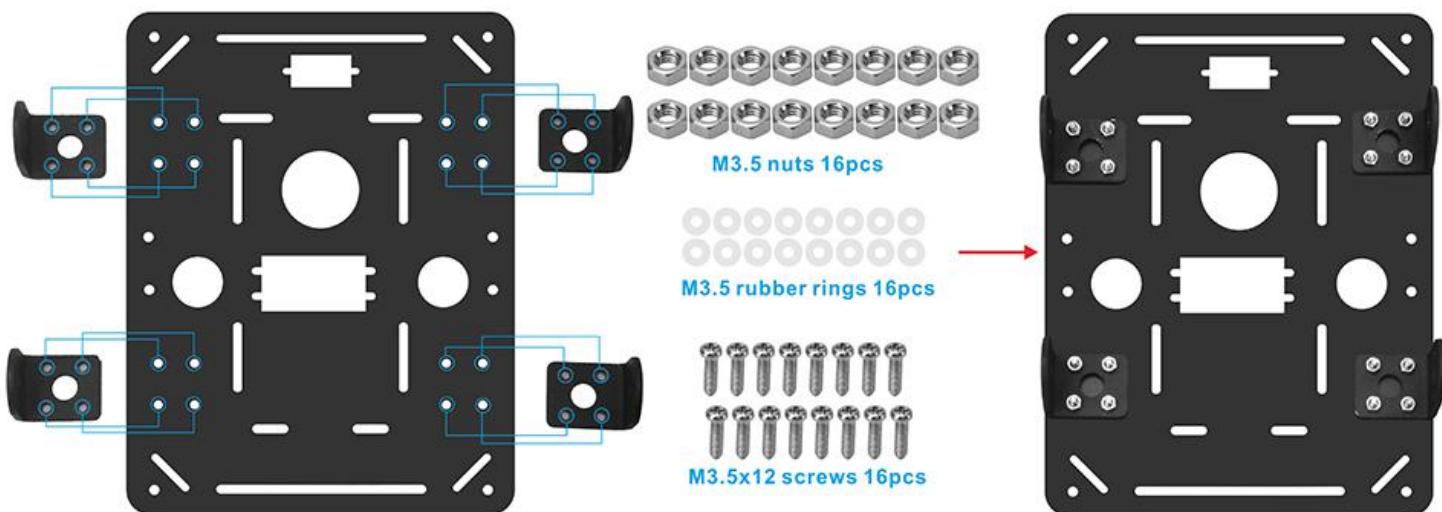


Step2. Installing 8pcs M3\*6 screws as per the following red box.


Please insert the motor wires into the motor as illustrated in the diagram, and secure any temporarily unused wires with cable ties.

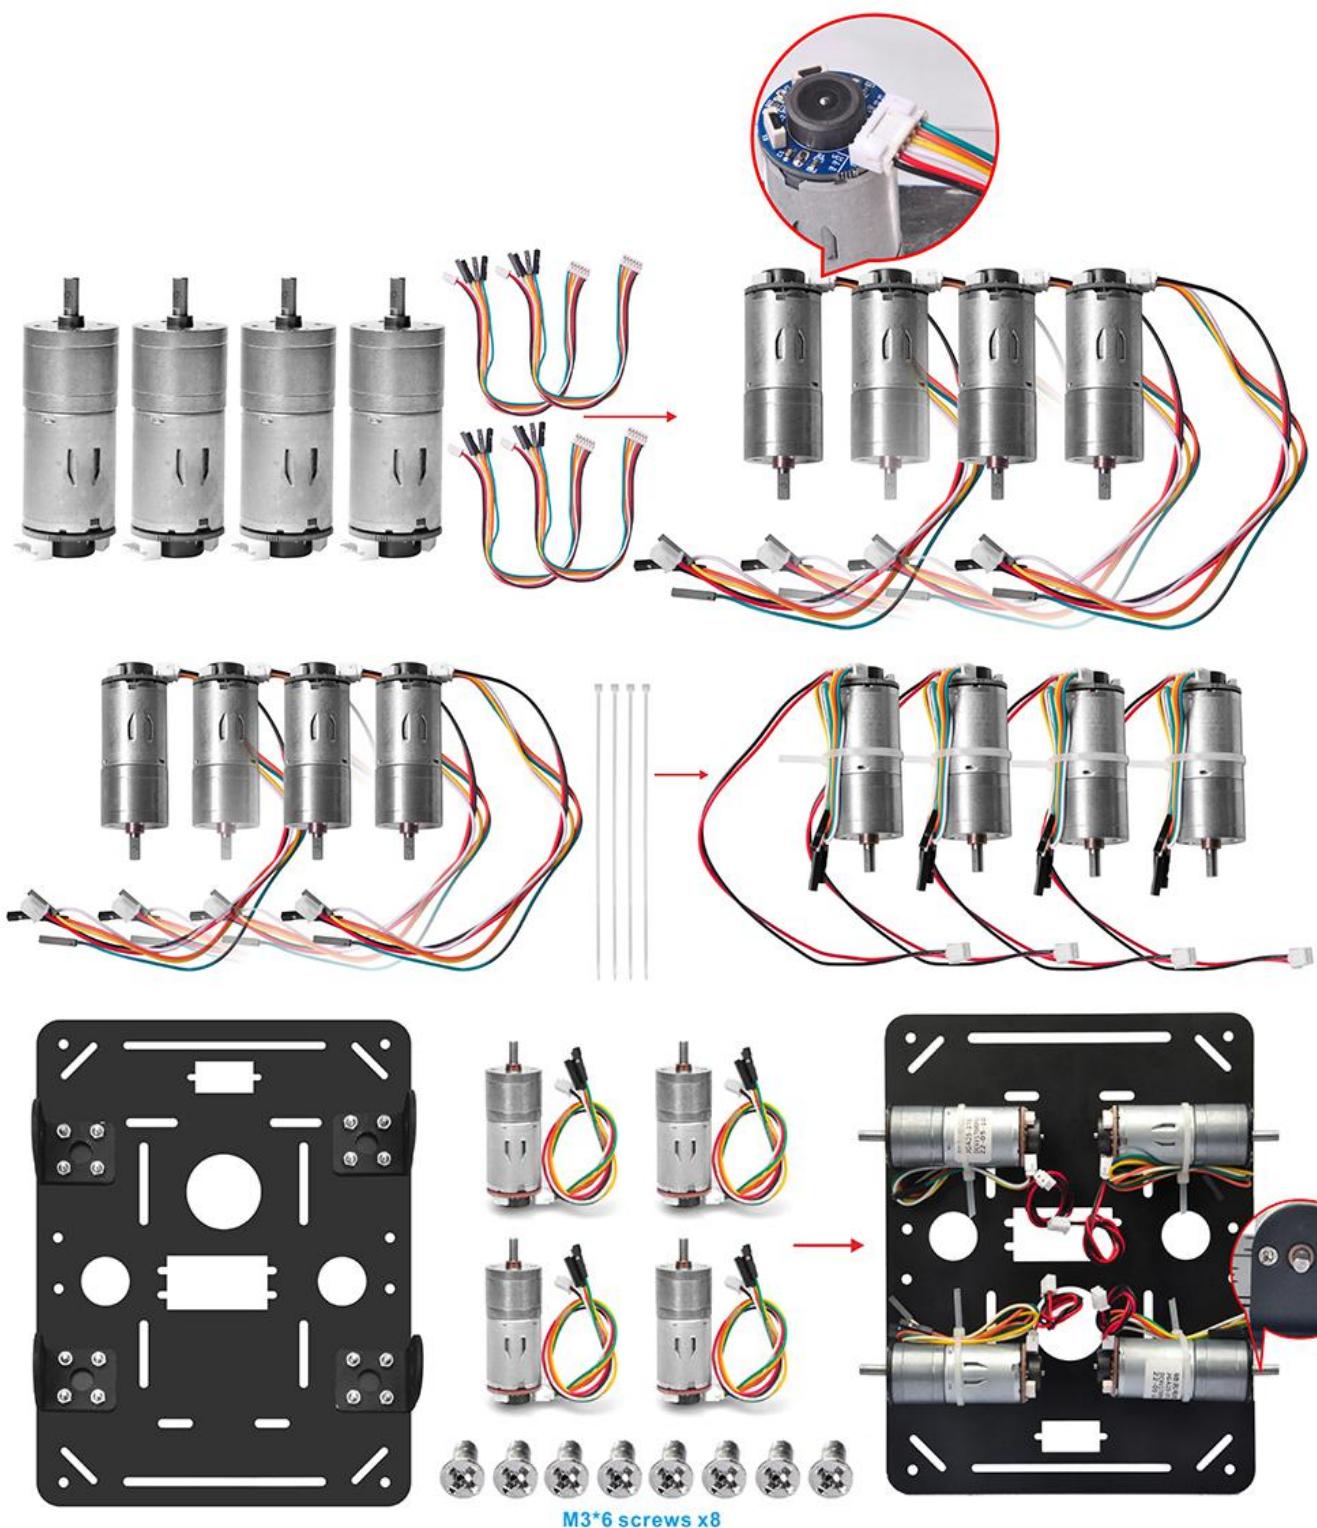

Step3. Install the jackscrews on al-alloy coupling, please tighten jackscrews to fix the al-alloy coupling on motor.

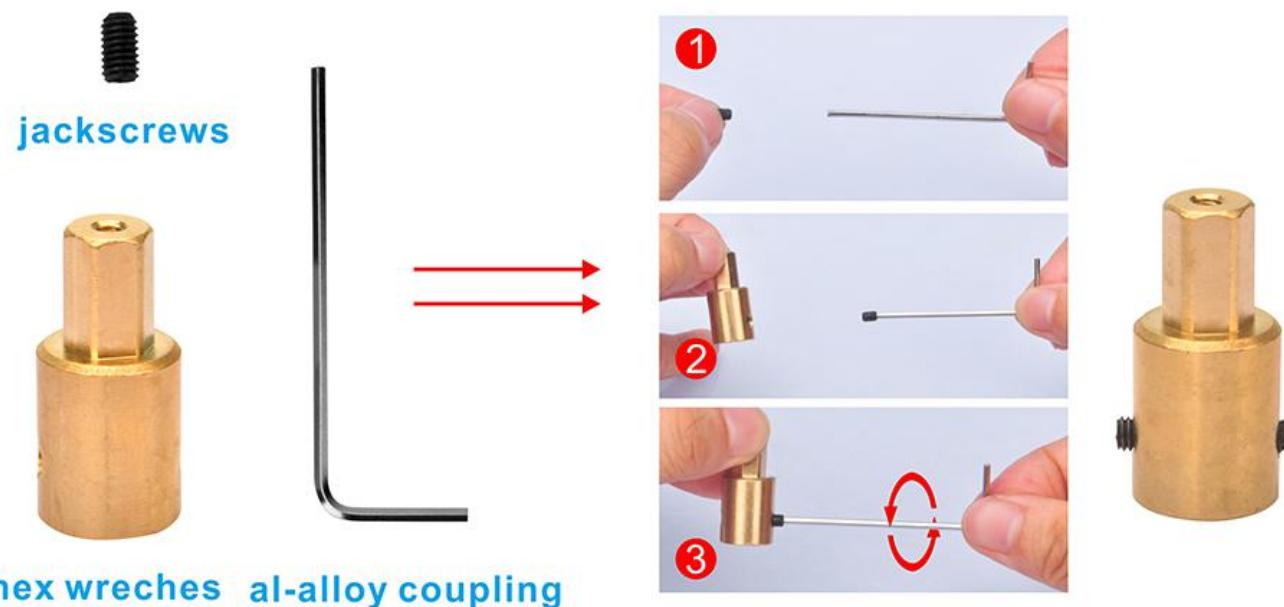

The shaft from the motor has a flat area on it. Make sure that the jackscrew was positioned on this flat, and tightened both screws on the shaft.

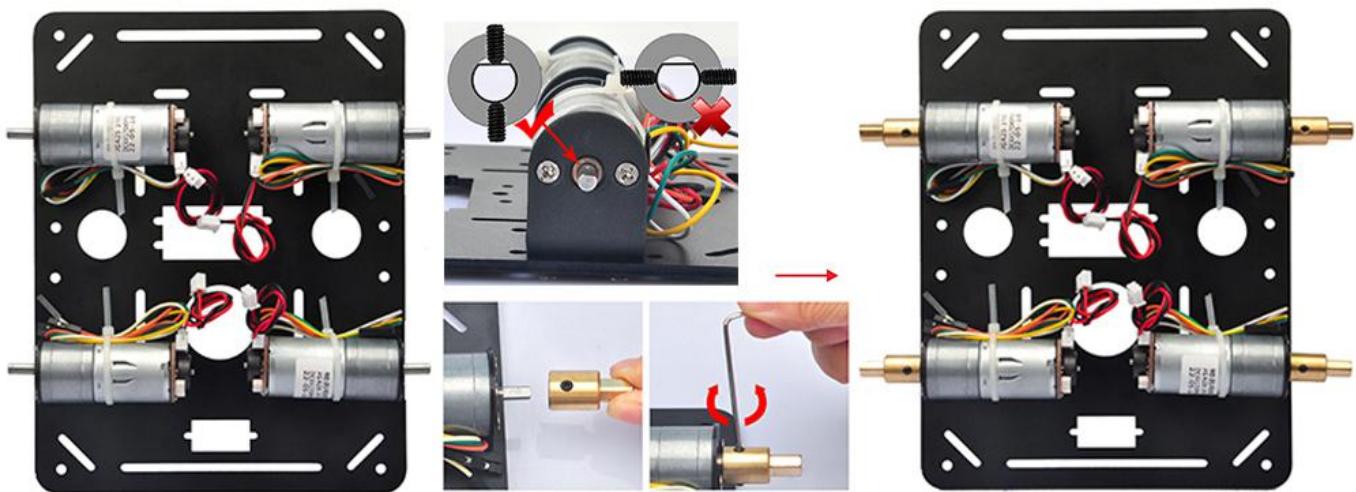

Step4. Install the 4 mecanum wheels on al-alloy coupling with 4pcs M2.5\*10.



The Mecanum wheel has some sub-wheels on the main wheel. The four Mecanum


wheels have two types by the sub-wheel directions. Check the type left wheel and right wheel by following **picture left side**. You must 100% sure that correct type of wheel is installed into correct position as per **picture right side**, the rolling direction of each wheel will determine the whole car moving directions showed in the picture.

A correct configuration requires each of four wheels is set in the way as shown below, where the rotation axis of each wheel's top roller points to the center of the platform. Please notice that all the dynamic analysis and prewritten codes are based on this configuration.

Two types of mecanum wheel and their installation position in the car.



Different rotation combination of 4 wheels will result in different car movement directions. Following pictures shows how they works.

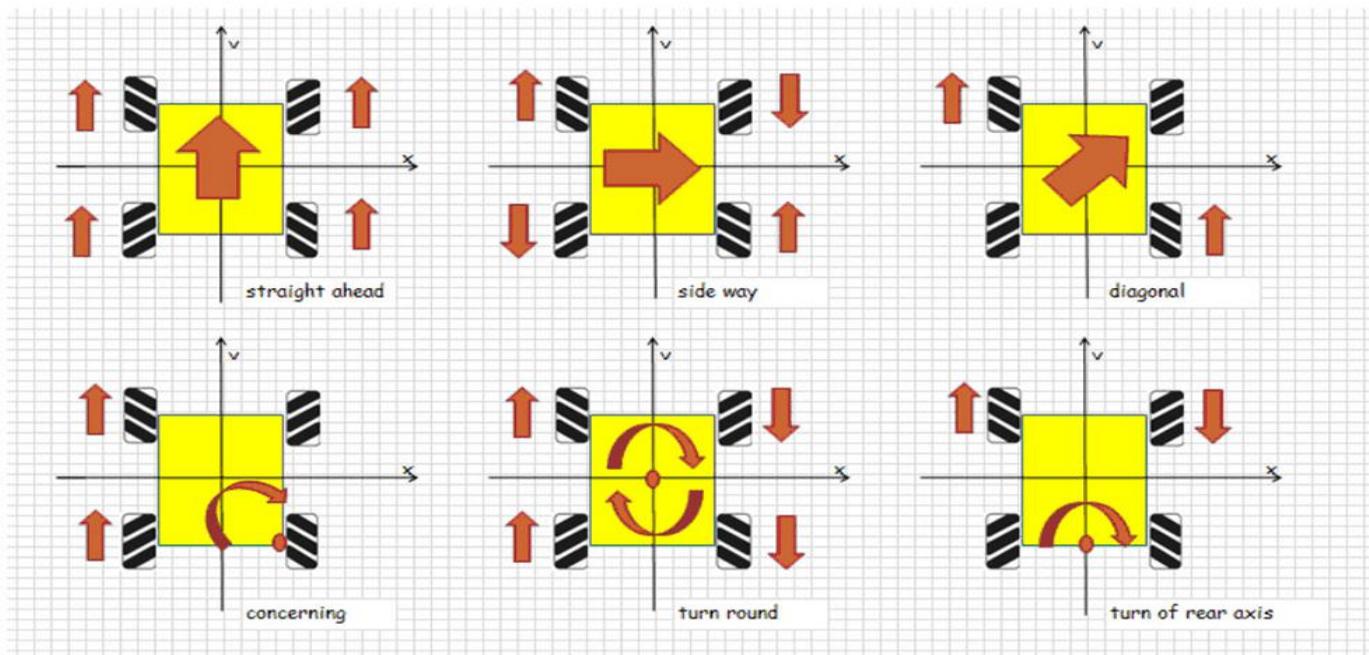

Step5. Install 2pcs M3x40 copper pillars with 2pcs M3 screws and 2pcs M3.5 rubber rings on


tracking sensor as following pictures.



Step6. We will add a 5-Point tracking sensor module to the car chassis with M3 nuts as following pictures.




Step7. Install 12pcs M3 plastic pillars and nuts on acrylic board as following pictures.

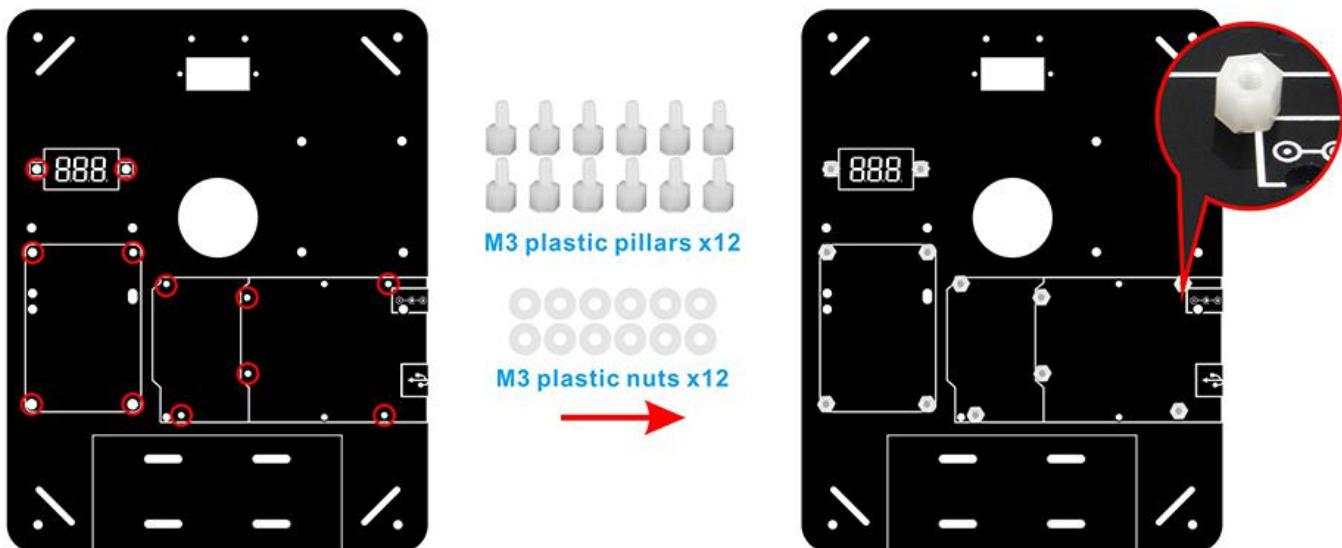

Step8. Install 1pcs osoyoo Mega2560 board, 1pcs model Y motor driver board and 1pcs voltage


meter on acrylic chassis with 8pcs M3 plastic screws as following pictures.

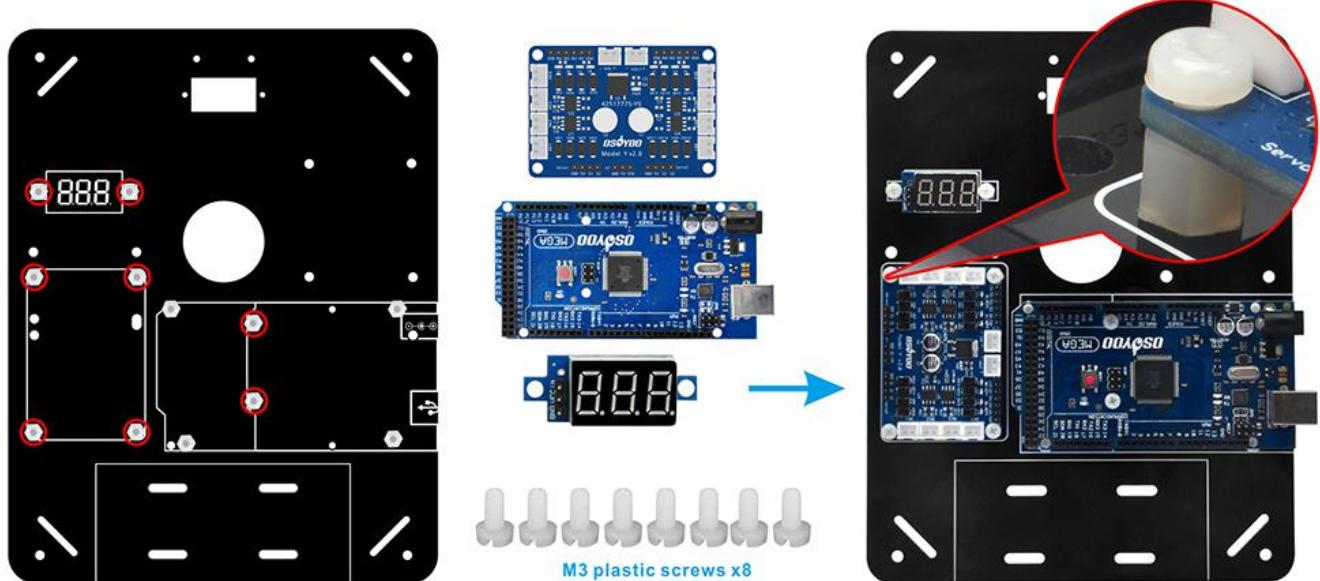


Step9. Install battery box with 4pcs M3x10 screws and nuts as following pictures.




Step10. Install SG90 servo on the acrylic chassis with 2pcs M2.2\*8 self tapping screws as following pictures.

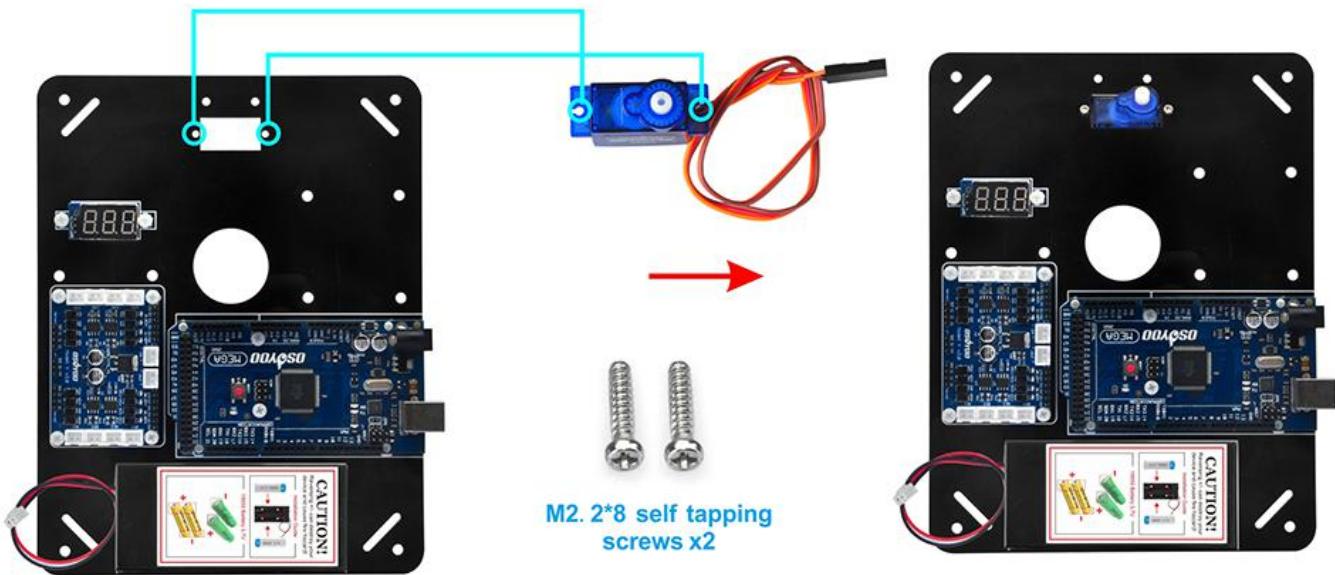

Step11. Remove the red jumper cap from wifi shield and insert OSOYOO wifi shield into Arduino Mega2560 board as following pictures.

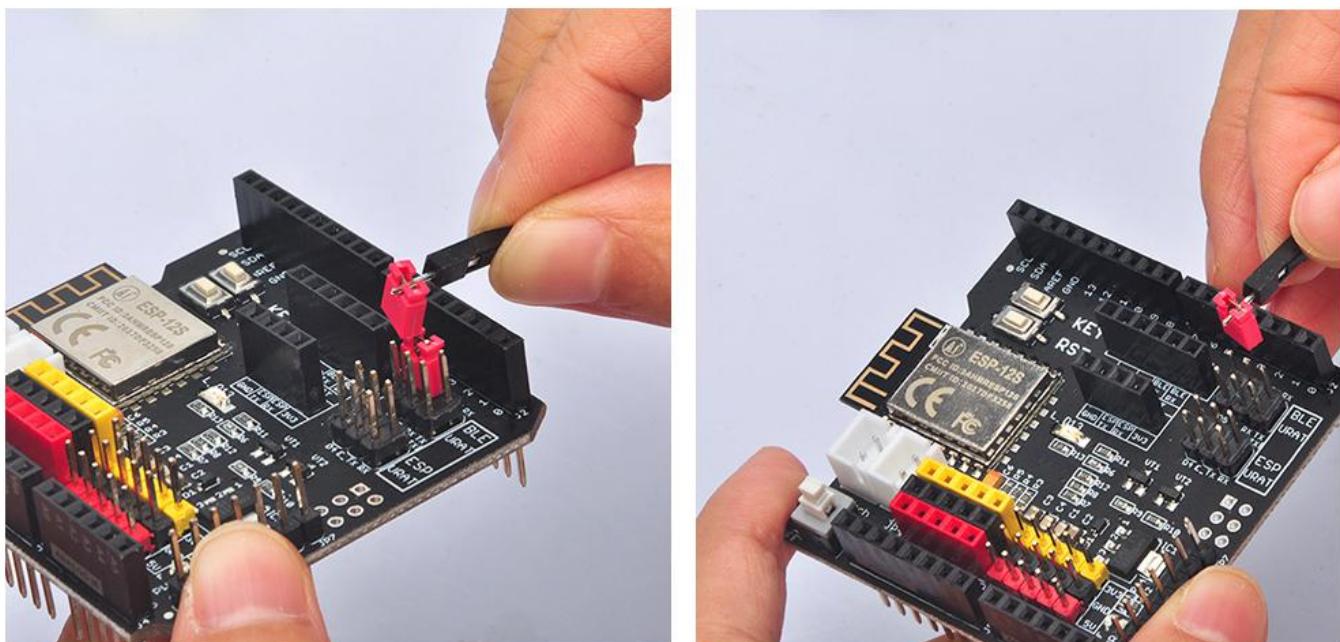

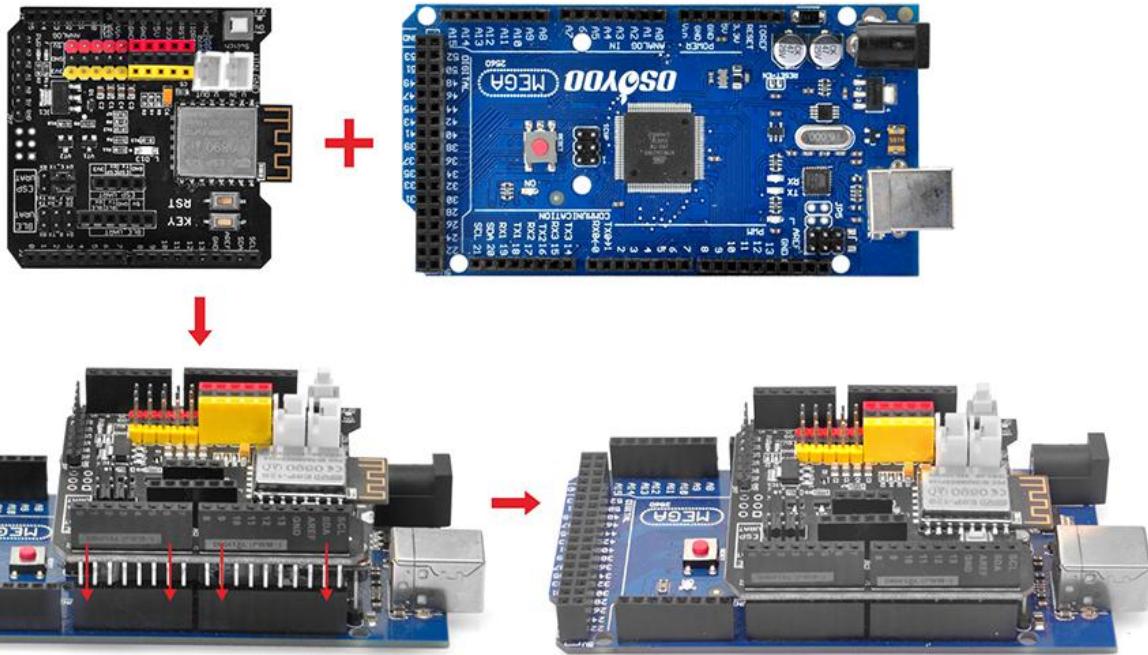


Step12. Install the acrylic chassis on metal chassis. Please note the front and back of acrylic chassis and metal chassis.



### CIRCUIT CONNECTION

Before connect wires, make sure you have inserted OSOYOO WIFI Shield onto MEGA2560 board already.

Step13. Connect 4 motors to model Y driver board as per the following pictures.

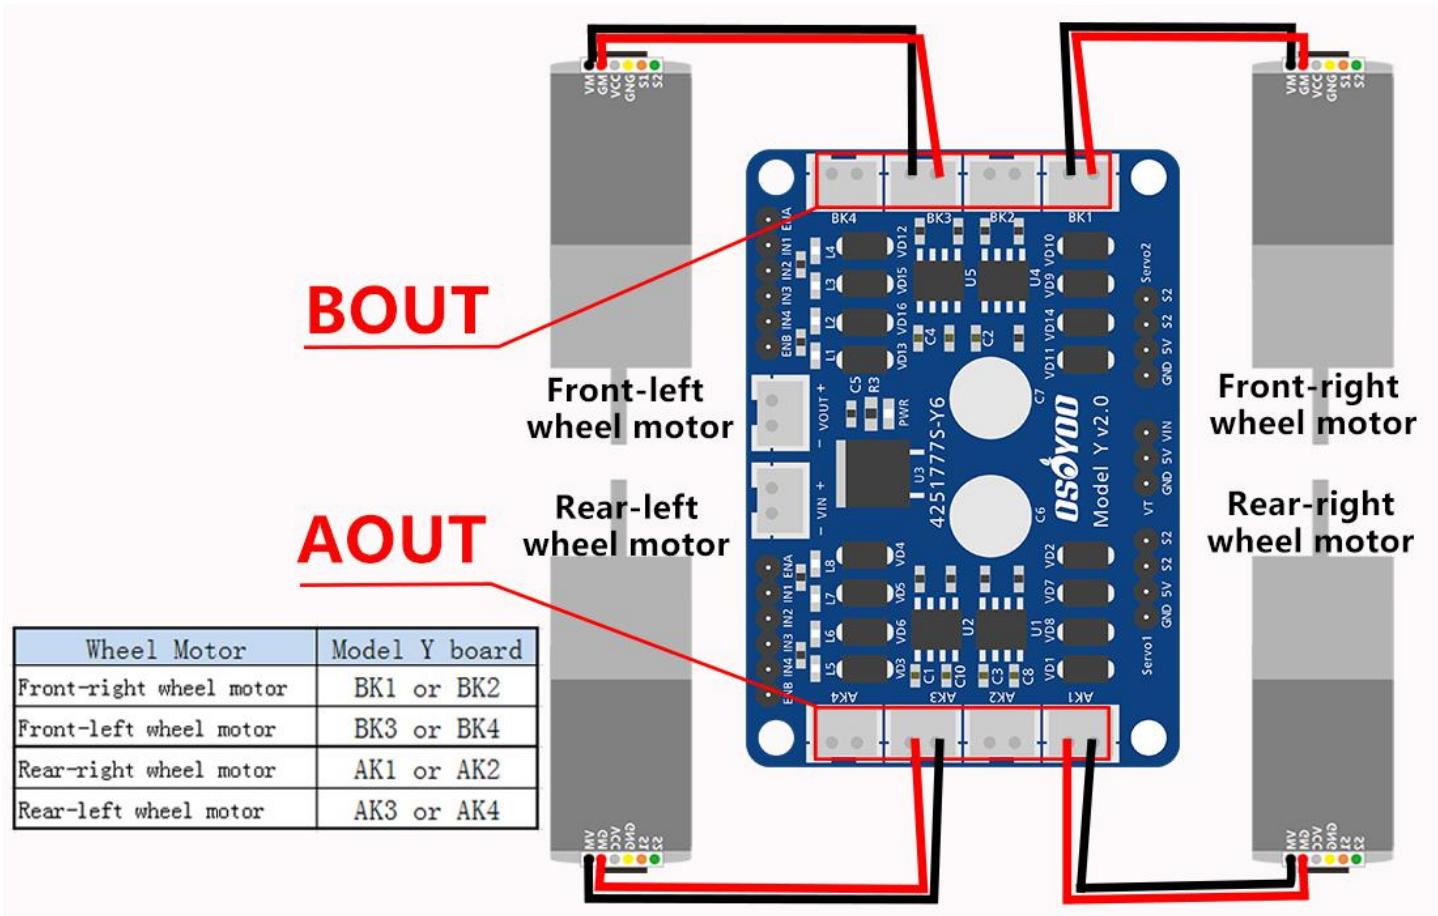


Step14.

Model Y board M\_A IN1,IN2,IN3,IN4 pin connect to D5,D6,D7,D8.

Model Y board M\_B IN1,IN2,IN3,IN4 pin connect to D22,D24,D26,D28.

M\_A ENA ,ENB pin connect to D11,D12.


M\_B ENA ,ENB pin connect to D9, D10.

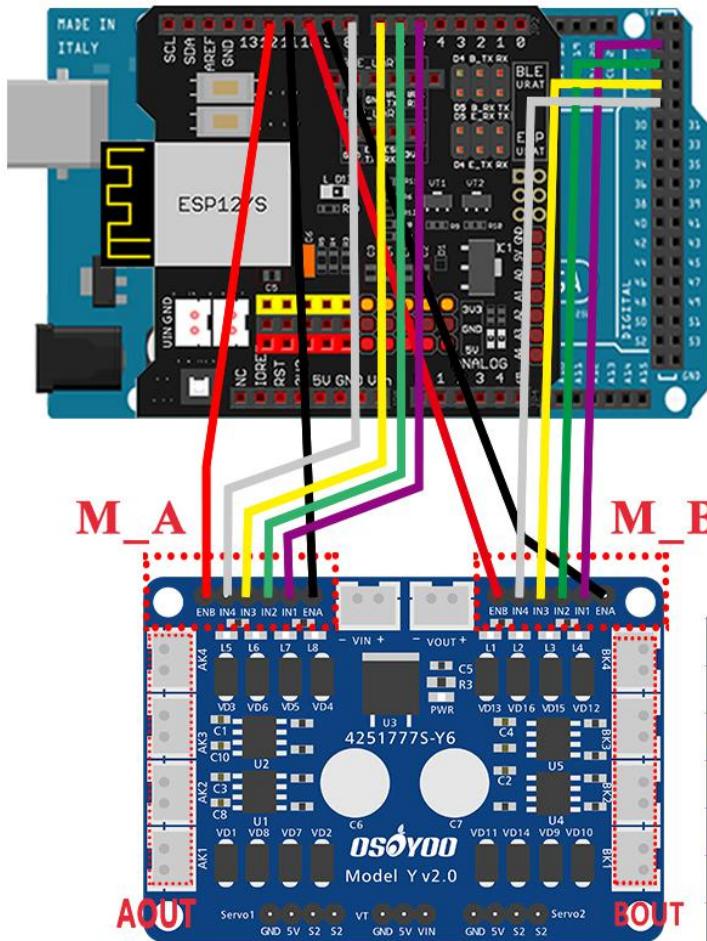


2pcs 6pin male  
to female wires

Model Y board	Uart Wifi Shield
M_A ENA	D11
M_A IN1	D5
M_A IN2	D6
M_A IN3	D7
M_A IN4	D8
M_A ENB	D12

Model Y board	Uart Wifi Shield	Mega2560 board
M_B ENA	D9	/
M_B IN1	/	D22
M_B IN2	/	D24
M_B IN3	/	D26
M_B IN4	/	D28
M_B ENB	D10	/

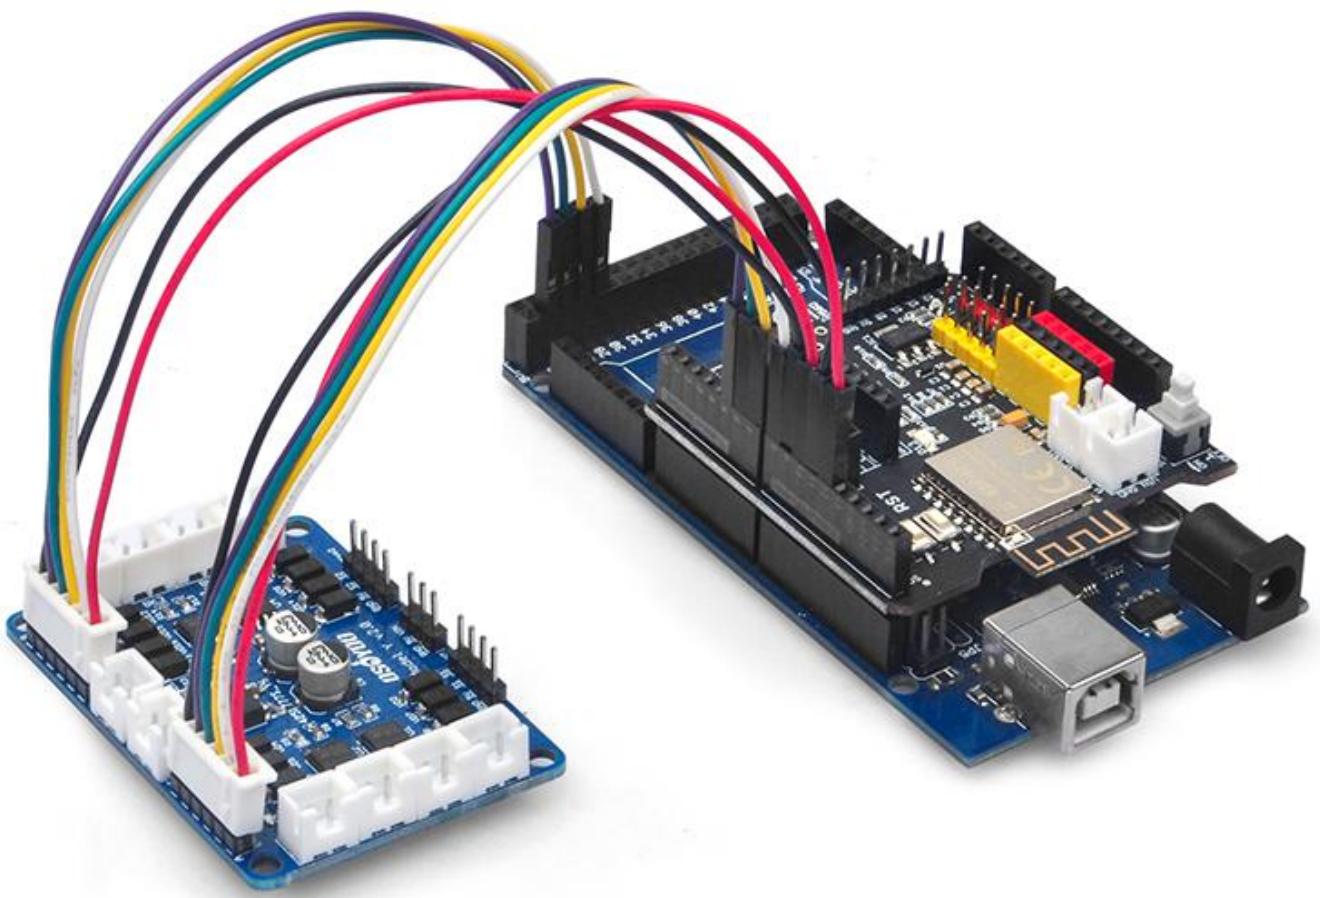

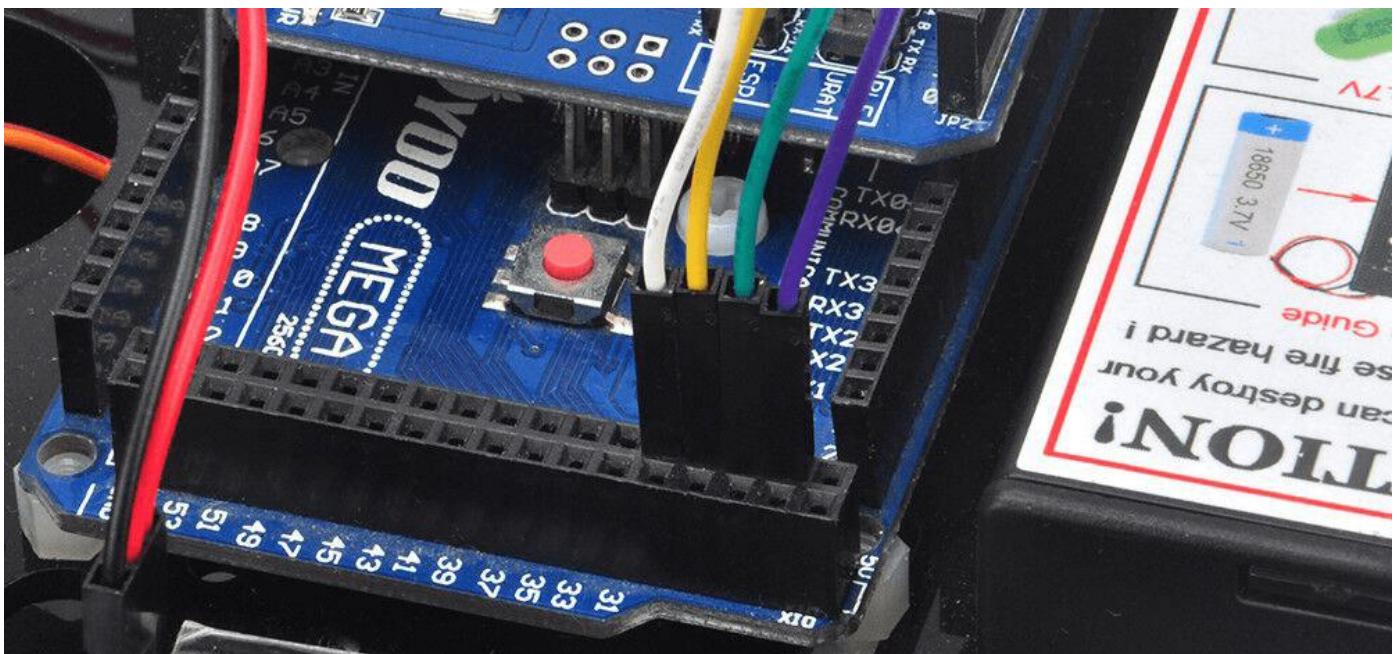

Caution:

When insert/remove the 6-pin parallel cable plug into Model Y 6-pin male socket, please hold the white plastic pin-holder to do operation. Never drag the wires to pull the plug out of the socket, otherwise it will damage the wires.



Step15.

Connect the voltage meter to model Y motor driver board with 3pin female to female cable as following picture.

Connect model Y motor driver board to wifi shield with 2pin XH2.54 female cable.

Connect 18650 battery box to model Y motor driver board as following picture.

## 18650 Battery box

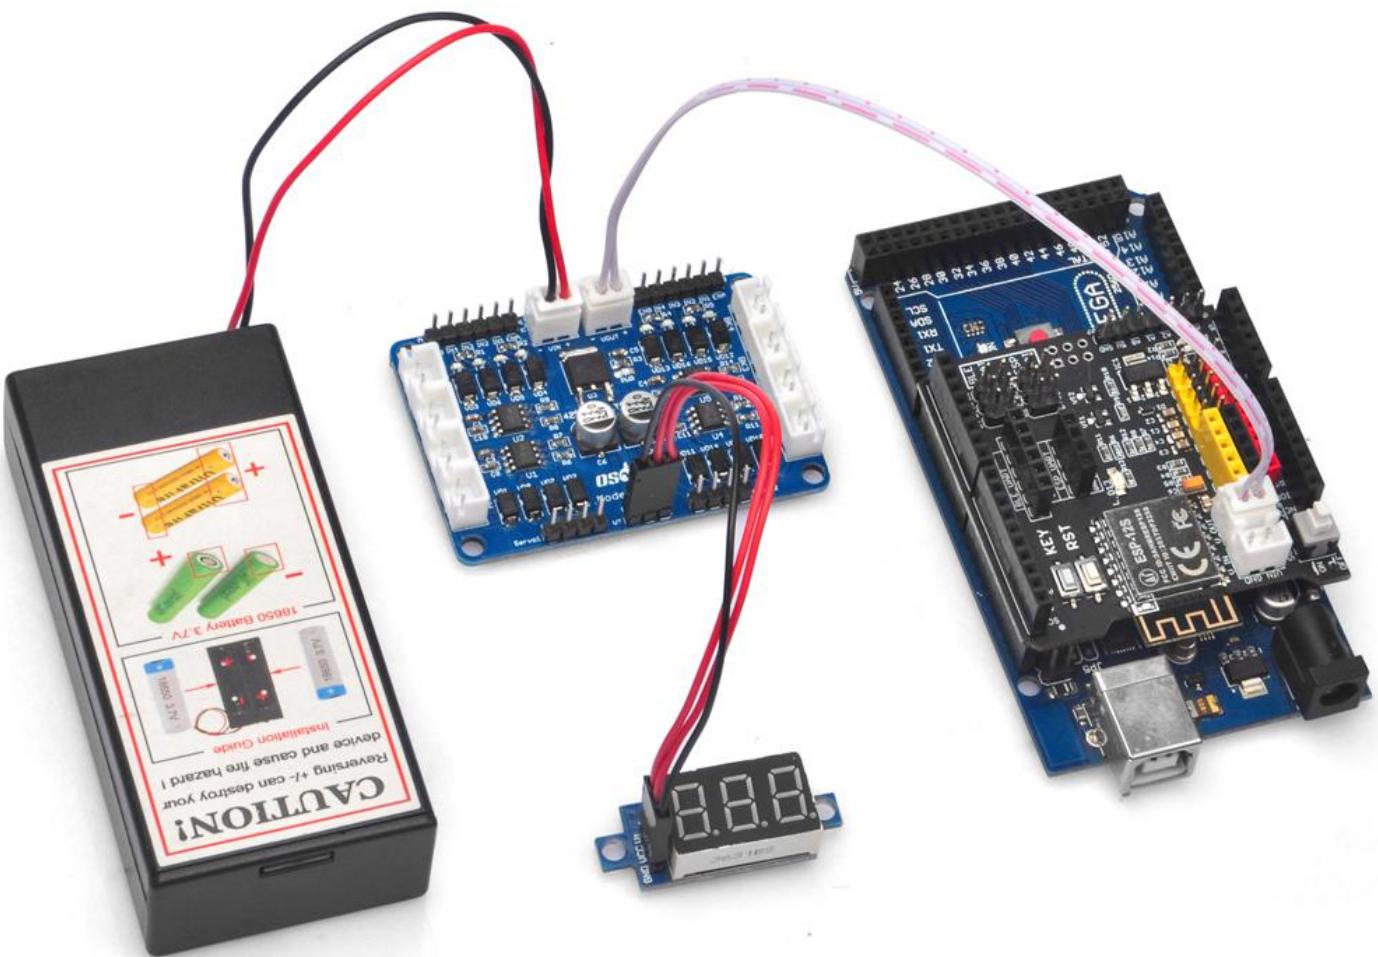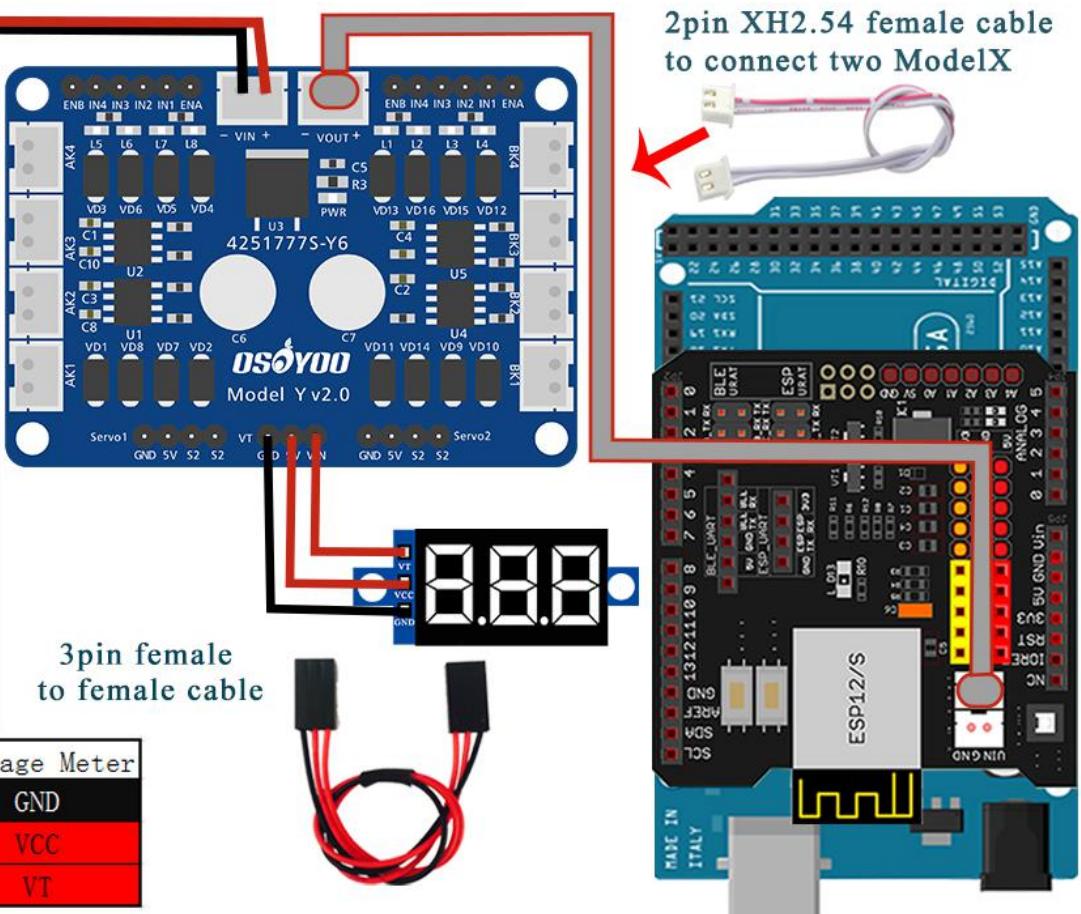


## SOFTWARE INSTALLATION

Open-source Arduino Software(IDE)		Download Arduino IDE here: <a href="https://www.arduino.cc/en/Main/Software?setlang=en">https://www.arduino.cc/en/Main/Software?setlang=en</a>
7 zip is a free zip utility that un-zips zip files		Download 7zip here for free <a href="https://www.7-zip.org/">https://www.7-zip.org/</a>


Step 1: Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from <https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

Step 2: Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson1.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson1.zip), unzip the download zip file called m2-lesson1.zip , you will see a folder called m2-lesson1.

Step 3: Connect Mega2560 board to PC with USB cable, Open Arduino IDE -> click file -> click Open -> choose code “m2-lesson1.ino” in m2-lesson1 folder, load the code into arduino.

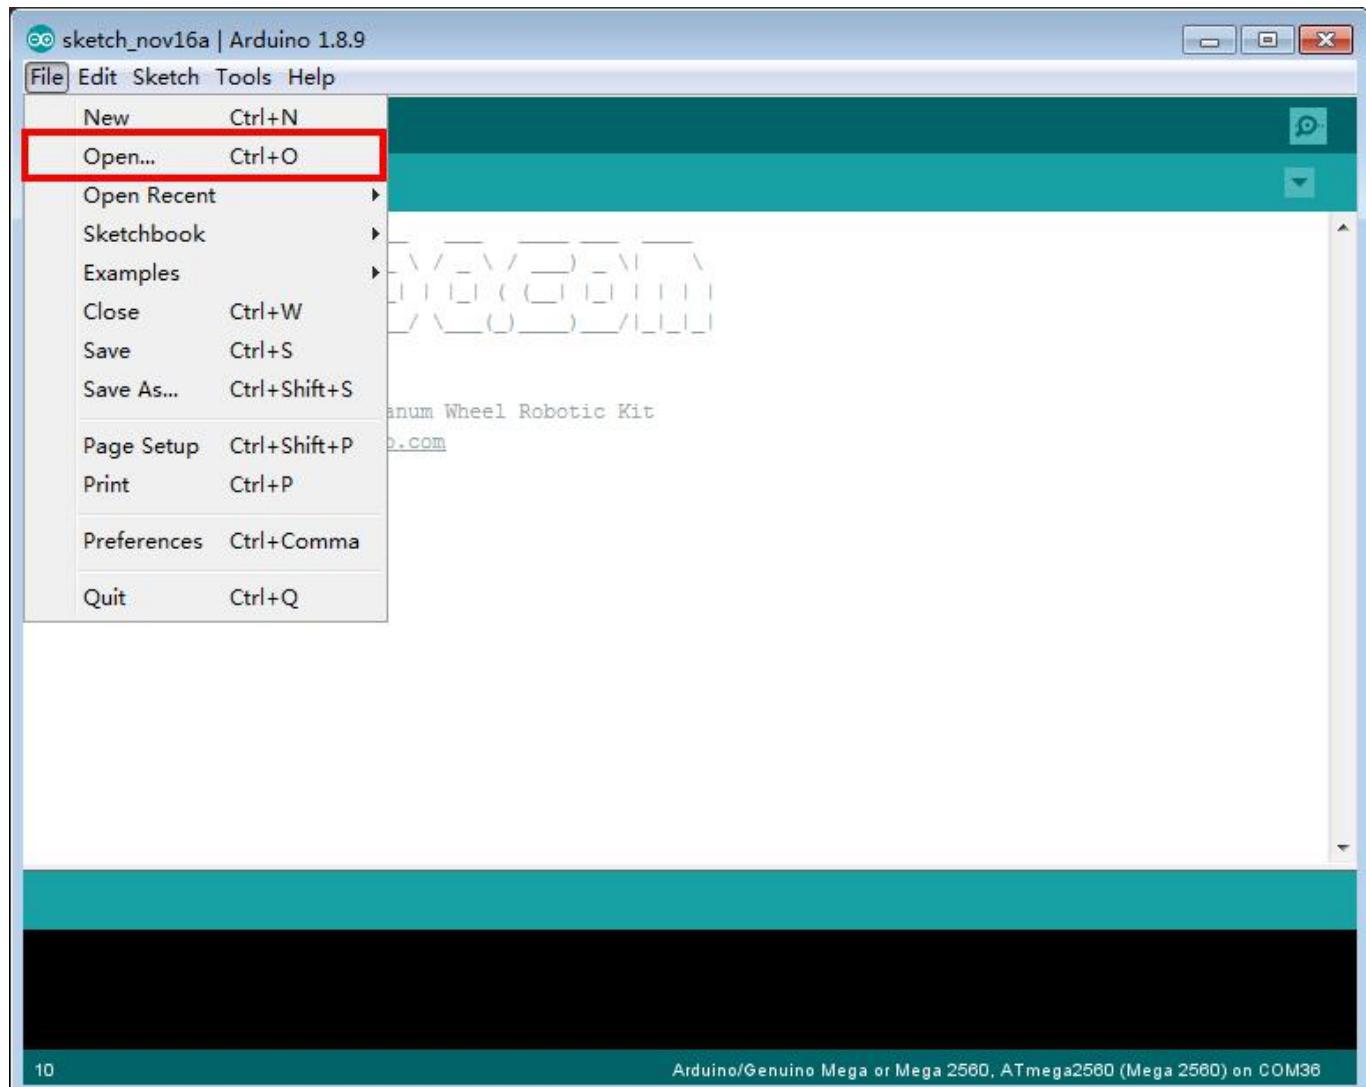

Step 4: Choose corresponding board/port for your project, upload the sketch to the

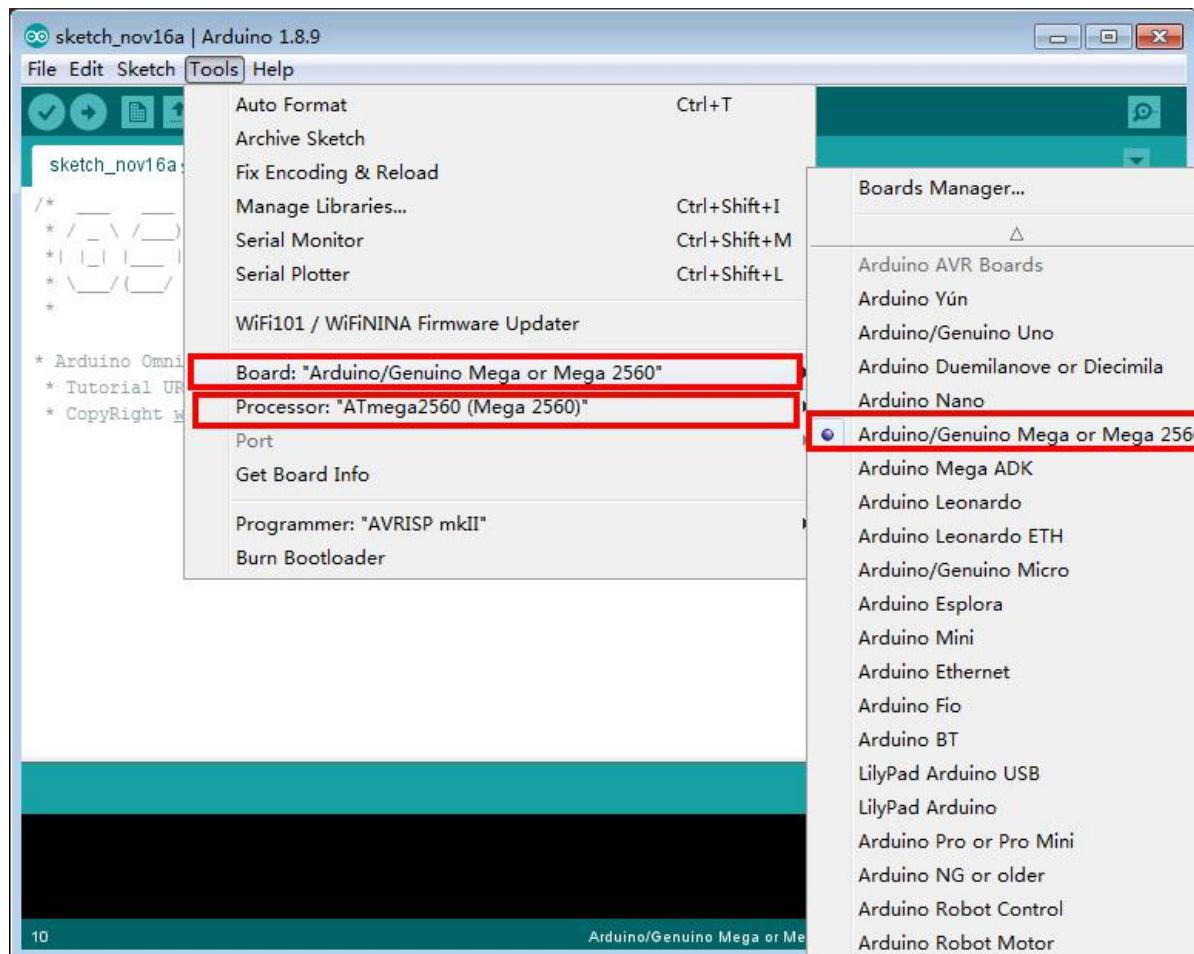

board.

## HOW TO PLAY

Disconnect Arduino from PC, put battery into battery box. When you put the car on the ground and turn on the switch on OSOYOO Uart WIFI shield and the switch on battery box if you install battery box for 18650.

After running Lesson 1 code, the car will move

Forward → Backward → Left turn → Right turn →

## Right Parallel Shift $\rightarrow$ Left Parallel Shift $\rightarrow$

Up Right Diagonal → Down Left Diagonal →

Up Left Diagonal  $\Rightarrow$  Down Right Diagonal

— 1 —

## NOTICE

In next lessons, if you want to change the speed performance of the robot car, you need to change the constants in lesson.ino sketch file:

```
#define MIN_SPEED  
  
#define TURN_SPEED  
  
#define SLOW_TURN_SPEED  
  
#define BACK_SPEED  
  
#define SHIFT_SPEED  
  
#define SPEED  
  
#define FAST_SPEED
```

MIN\_SPEED is the minimum power required to start the car. If when APP engine toggle is switched to RED, but your car does not move, you need increase this value , if the car runs too fast at engine start moment, you need reduce this value.

TURN\_SPEED and SLOW\_TURN\_SPEED value determines the turning speed of your car. If your car turning too fast, you need reduce these two values, if turning too slow or not turning,increase these two values.

SLOW\_TURN\_SPEED about 20 to 30 lower than TURN\_SPEED value.

BACK\_SPEED value determines the reverse back running speed.

SHIFT\_SPEED value determines parallel shifting speed.

SPEED value determines forward moving speed

FAST\_SPEED: The difference between FAST\_SPEED and SPEED determines the slight turning sharpness. The max value of FAST\_SPEED is 255.

To get better running performance result, motor power(speed) value should be adjusted properly as per battery level. If motor power(speed) value is too high, your car might run too fast and easy to out of control. If motor power(speed) is too low, the car might not even move.



# Lesson 2 Obstacle Avoidance Robot Car

## OBJECTIVE

In this lesson, you must complete [lesson 1](#) before you continue on with this lesson. we use the ultrasonic module to “see” obstacle and measure the distance. If the distance is less than predefined threshold value, the buzzer will beep and the car will turn around from the obstacle automatically.

## PARTS & DEVICES

OSOYOO Mecanum Wheels Robotic Car Chassis x 1 (2xleft-wheels/2xright-wheels and Motor x 4)

OSOYOO Mega2560 board fully compatible with Arduino x 1

OSOYOO WiFi shield x 1

OSOYOO Model Y motor driver x 1

OSOYOO MG90 servo motor x 1

OSOYOO Ultrasonic sensor module x1

OSOYOO Ultrasonic mount holder

OSOYOO Battery box x 1

OSOYOO 3pin female to female jumper wire x1

OSOYOO 6pin male to female jumper wire x2

OSOYOO 2 pin XH.25 female to female x1

OSOYOO 10 pin jumper wire male to female x1

18650 Batteries (3.7V) x 2

## HARDWARE INSTALLATION

You must complete [lesson 1 \(assembling the car\)](#) before you continue on with this lesson. In this lesson3, we will add a servo motor and to the robotic car built in Lesson 1.

STEP1: Install Ultrasonic Module to mount holder with 4pcs M1.4\*8 screw and M1.4 nuts.



STEP2: Install mount holder for ultrasonic module on servo motor with M2\*4 Self Tapping screw.

When placing the ultrasonic underneath, as the self tapping screws screws easily strip.

A. Support the motor from underneath, as the self tapping screws easily strip.

B. Do not insert the screw until after the alignment process.




## CIRCUIT CONNECTION

You must complete [lesson 1 \(assembling the car\)](#) circuit connection. No need change anything, just keep the hardware wire connection as it is.

STEP3: Please keep all lesson 1 connections same as it is. Before connecting wires, make sure that you have connect SG90 servo motor to model Y board and OSOYOO uart wifi shield as follows.


(Note: You need split 1 pcs of male-to-female jumper wires from our 10-pc jumper wire bundle. Any color from the bundle will be ok. The rest of wires are as spare parts for potential broken or damaged wires.)

## Model-Y Board

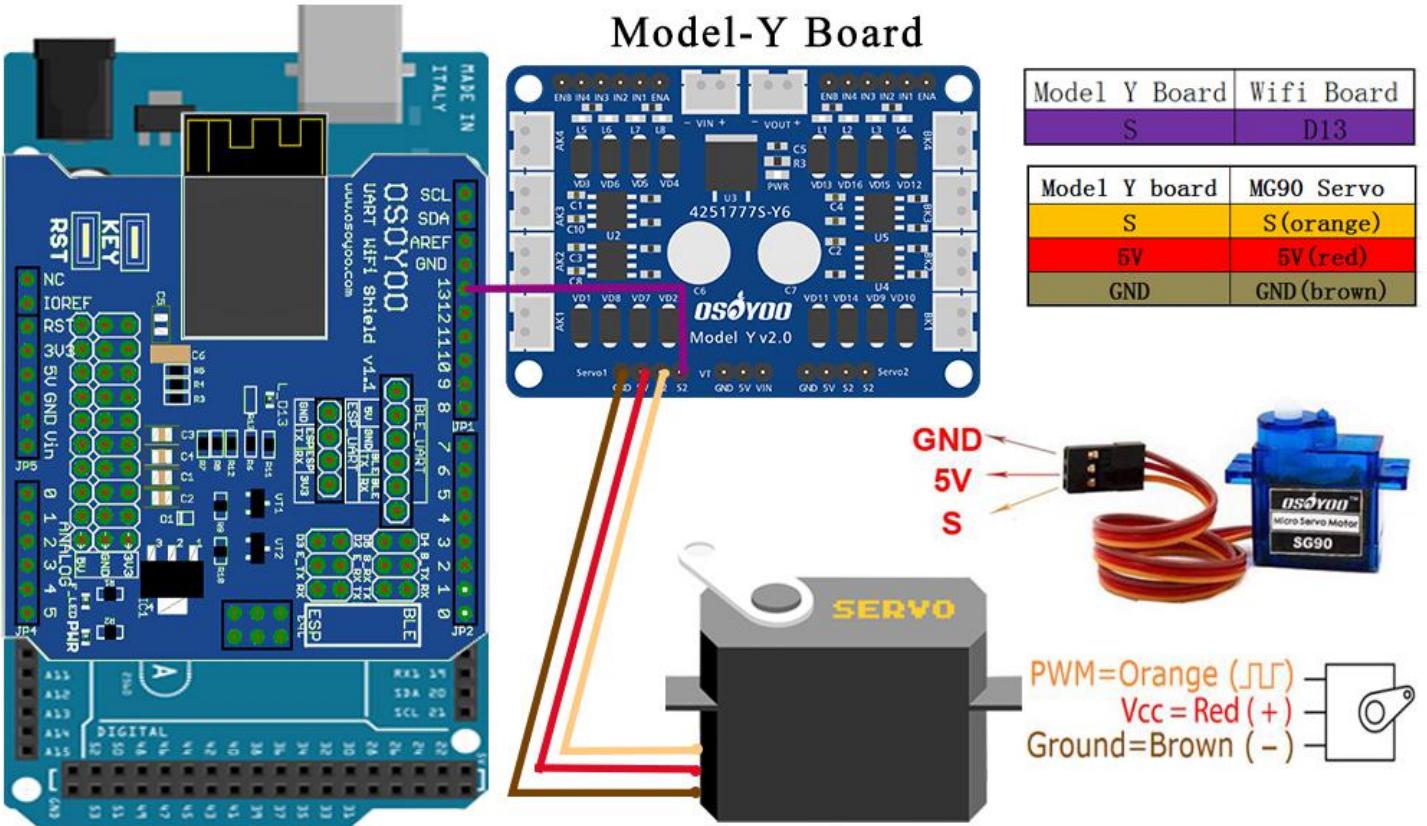

STEP4: Connect VCC,Trig,Echo,GND of ultrasonic module to 5V,D30,D31,GND of wifi shield with 4 pcs of male-to-female jumper wires.

(Note: You need split 4 pcs of male-to-female jumper wires from our 10-pc jumper wire bundle. Any color from the bundle will be ok. The rest of wires are as spare parts for potential broken or damaged wires.)

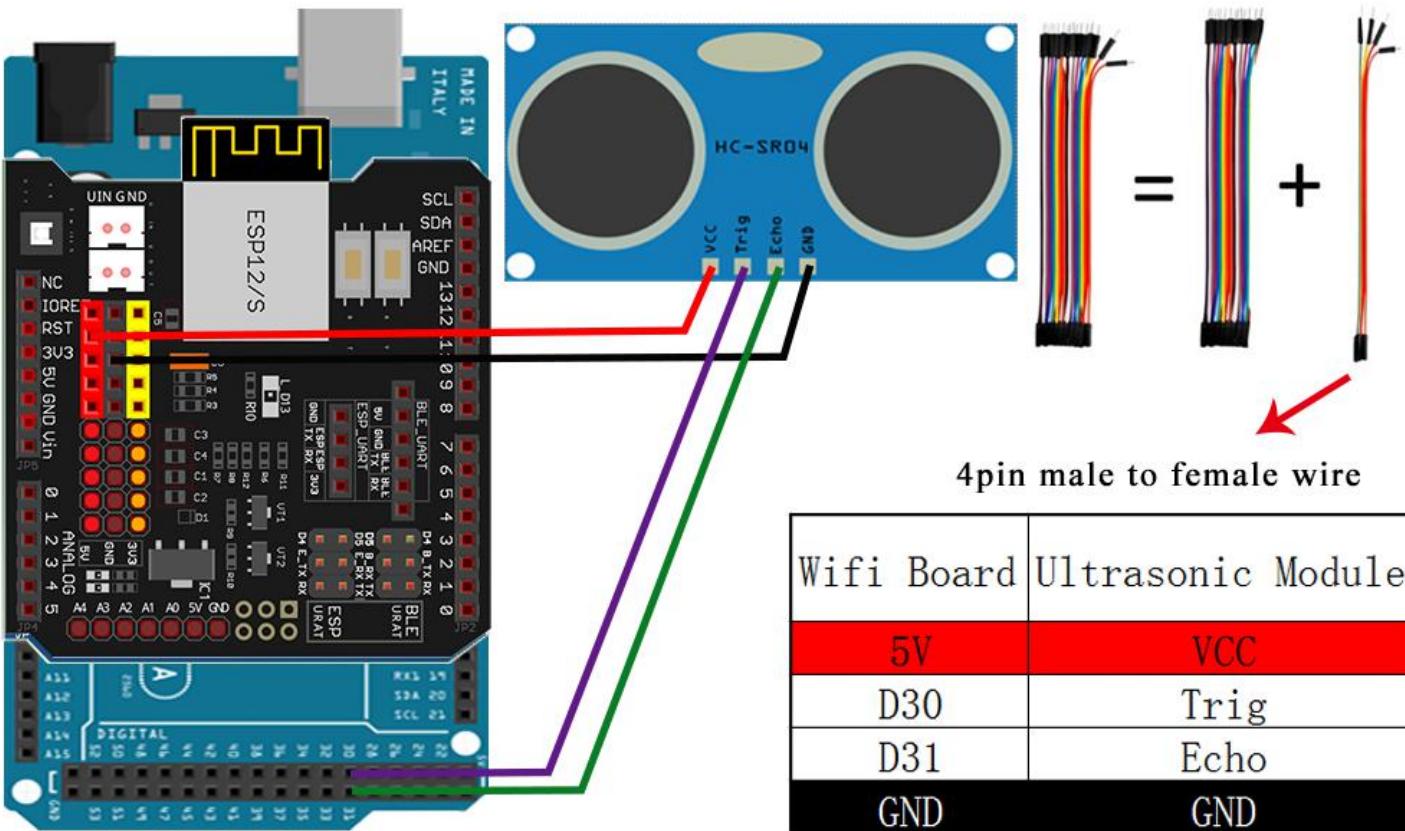

## SOFTWARE INSTALLATION

Open-source  
Arduino  
Software(IDE)



7 zip is a free zip  
utility that  
un-zips zip files



Download Arduino IDE here:

<https://www.arduino.cc/en/Main/Software?setlang=en>


Download 7zip here for free

<https://www.7-zip.org/>


Step 1: Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from <https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

Step2: Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson2.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson2.zip) , unzip the download zip file m2-lesson2.zip, you will see a folder called m2-lesson2 . )

Step3: Connect Mega2560 board to PC with USB cable, Open Arduino IDE -> click file -> click Open -> choose code “m2-lesson2” in lesson folder, load the code into Arduino as following.

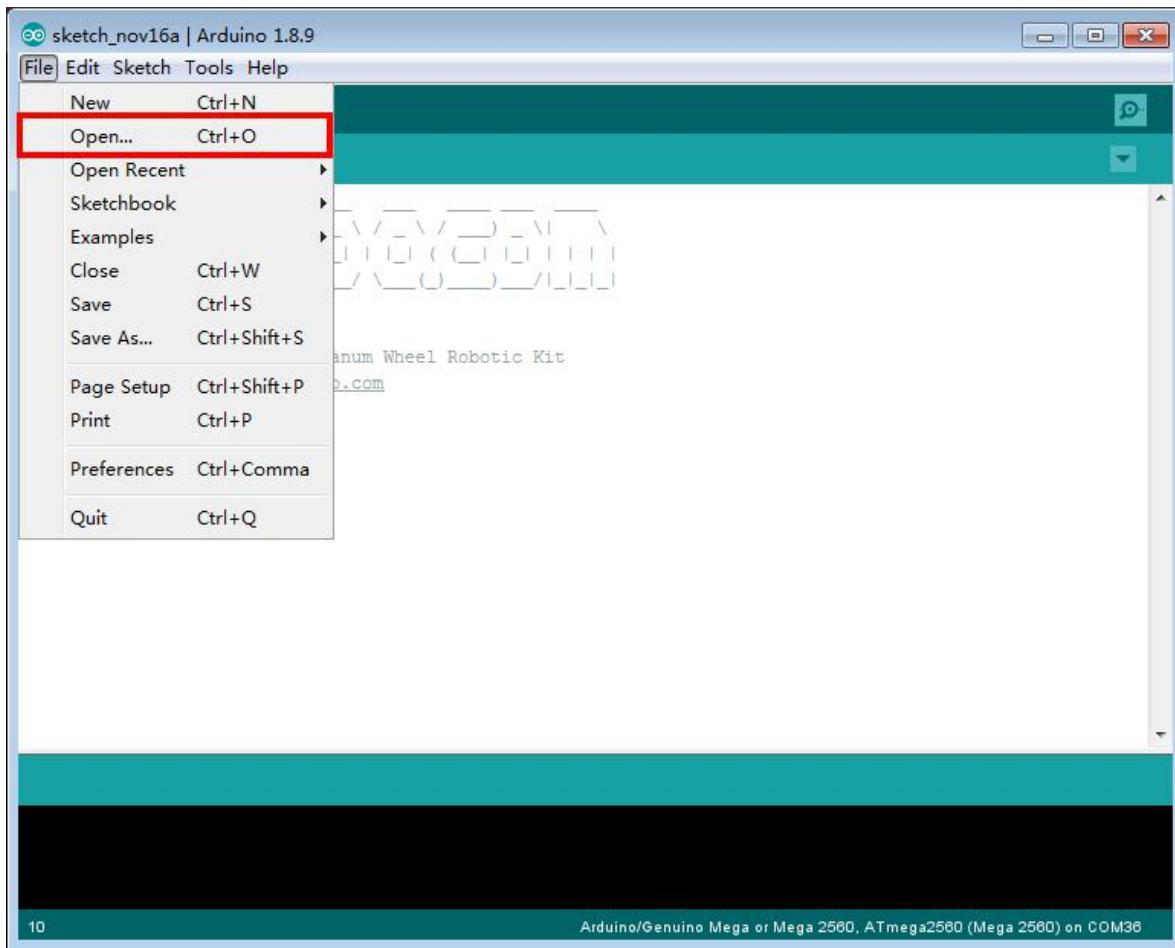

Step4: Choose corresponding board/port for your project, upload the sketch to the board.

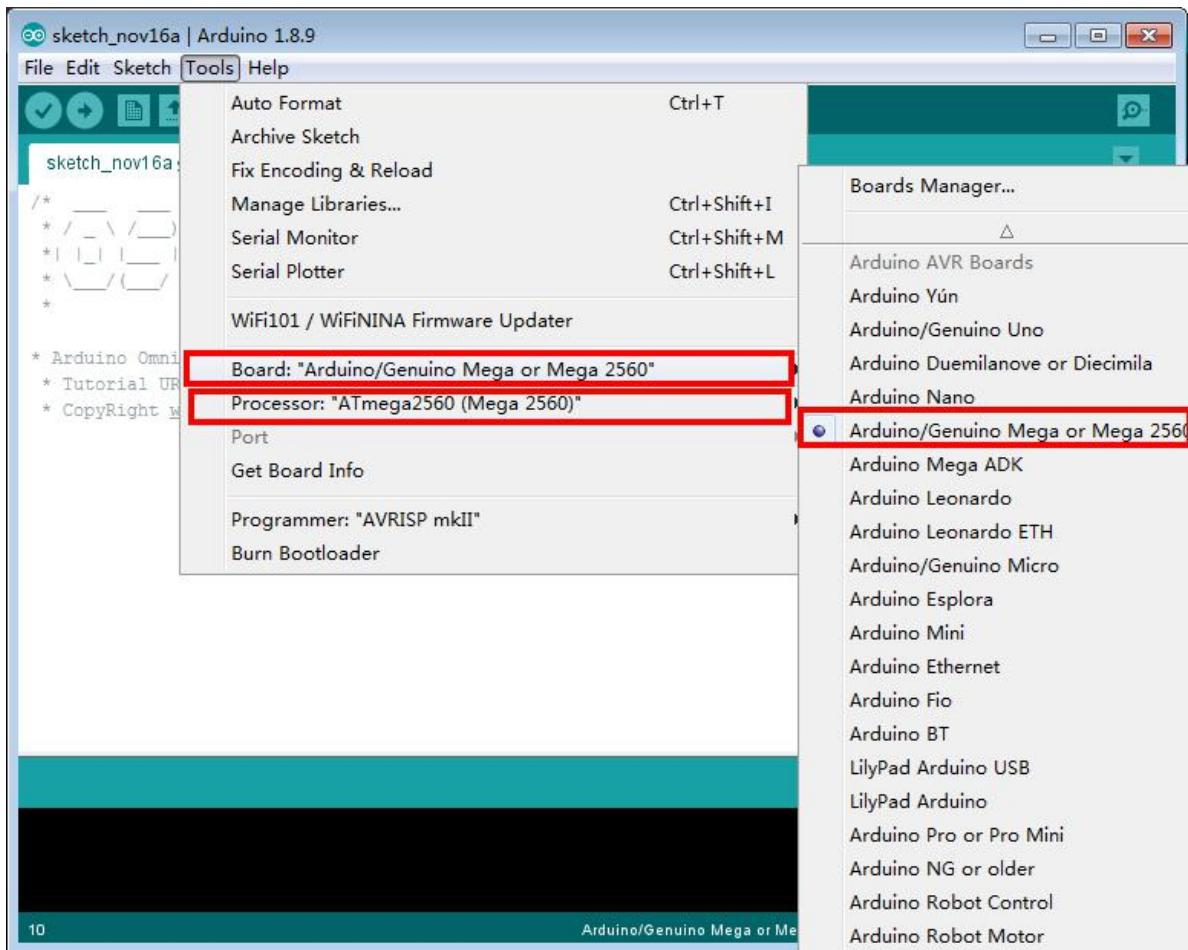


## Step5: Ultrasonic sensor servo initial direction alignment

After turning on the battery, the servo will make some movement and finally stops at a direction for 5 seconds. During this first 5 seconds, you must make sure the Ultrasonic sensor(two eyes) is facing straight forward.

If it is not straight forward, you should turn off battery immediately and remove the sensor from servo, reinstall it and make it facing straight forward direction as following picture.

Otherwise the obstacle avoidance program will not work properly.

After adjusting sensor direction, turn on battery again. If its direction is not straight forward, turn off battery and do direction alignment again.

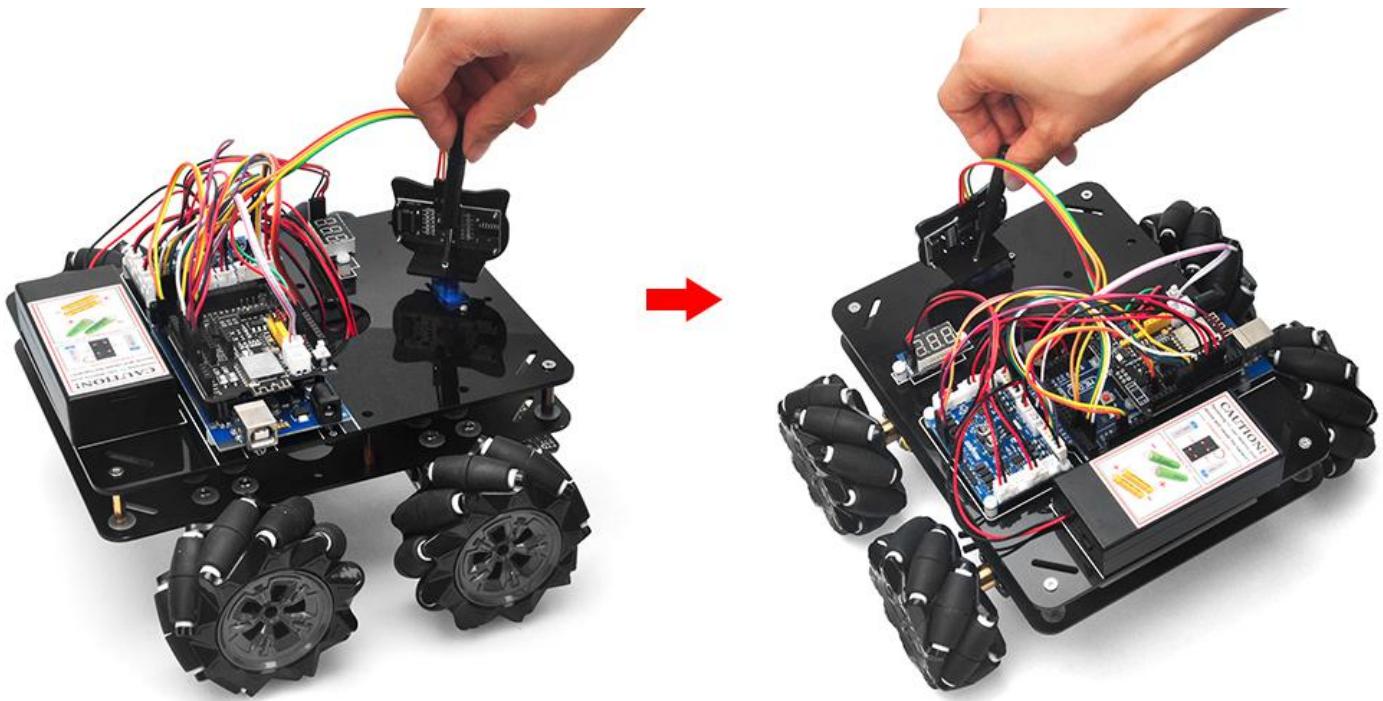

## HOW TO PLAY

If the ultrasonic module turn to front view position, that means you no need adjust sensor position anymore. Just wait 5 seconds.

If no obstacle is detected, the car will go forward. If any obstacles is detected, the car will stop, the ultrasonic module will turn from right to left to detect surrounding obstacle.

The robot car will decide to make left turn, right turn or backward according to obstacle sensor data and our obstacle avoidance algorithm.

Sometimes your car might have collision and make your Ultrasonic sensor position change, you must remember to do sensor direction alignment again.

The robot car will decide to make left turn, right turn or backward according to obstacle sensor data and our obstacle avoidance algorithm. Sometimes your car might have collision and make your Ultrasonic sensor position change, you must remember to do sensor direction alignment again.

Important parameters in the sketch file

Following parameters in Line 35 to 39 of m2-lesson2.ino are very important to make performance tuning. See the comments in the #define statements:

```
#define FAST_SPEED 170 //both sides of the motor speed
```

```
#define SPEED 100 //both sides of the motor speed
```

```
#define TURN_SPEED 150 //both sides of the motor speed
```

```
#define BACK_SPEED1 150 //back speed
```

```
#define BACK_SPEED2 100 //back speed
```

# Lesson 3 Line Following Robot Car

## OBJECTIVE

In this lesson3, we will add a 5-Point tracking sensor module to the robotic car built in Lesson1.

The software in this lesson will read data from the 5-Point Tracking sensor module and automatically guide the smart car to move along the black track line in the white ground.

## PARTS & DEVICES

OSOYOO Mecanum wheels robotic car chassis x 1 (2x left-wheels/2x right-wheels and Motor x 4)

OSOYOO Mega2560 board fully compatible with Arduino x 1

OSOYOO WiFi shield x 1

OSOYOO Model Y motor driver x 1

OSOYOO 5-Point Tracking sensor module

OSOYOO 3pin female to female jumper wire x1

OSOYOO 6pin male to female jumper wire x2

OSOYOO 7pin female to female jumper wire x1

OSOYOO 2 pin XH.25 female to female x1

OSOYOO Battery box x 1

18650 Batteries(3.7V) x 2

## HARDWARE INSTALLATION

You must complete lesson 1 (assembling the car) before you continue on with this lesson.

STEP1: We have install 2pcs M3x40 copper pillars with 2pcs M3 screws and 2pcs M3.5 rubber rings on tracking sensor in lesson1 as following pictures.



STEP2. We have added a 5-Point tracking sensor module to the car chassis with M3 nuts in lesson1 as following pictures.



## CIRCUIT CONNECTION


Start the installation from previous status of [Lesson 1](#). If you have installed Lesson 1, no need change anything, just keep the hardware wire connection as it is.

STEP3 : Connect 5-point tracking sensor board to WIFI Shield as per following picture.

Connect GND pin of tracking sensor module to GND of wifi shield;

Connect VCC pin of tracking sensor module to 5V of wifi shield;

Connect IR1,IR2,IR3,IR4,IR5 pins to A4, A3, A2,A1,A0 with 7pin female to female cable as the following photo shows (Remember: DO NOT remove any existing wires installed in Lesson 1).

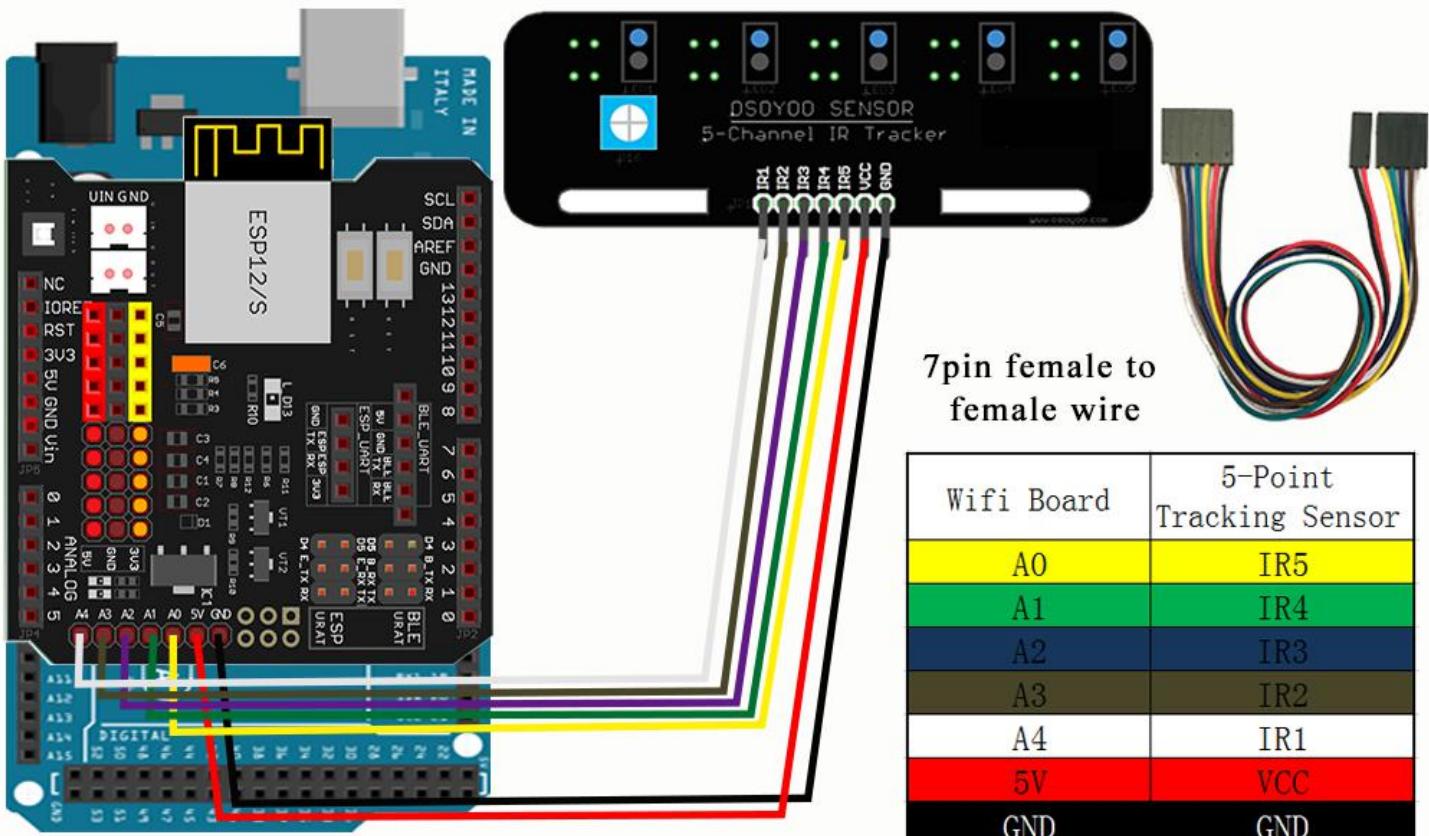

## SOFTWARE INSTALLATION

Open-source  
Arduino  
Software(IDE)



Download Arduino IDE here:

<https://www.arduino.cc/en/Main/Software?setlang=en>

7 zip is a free zip  
utility that un-zips  
zip files



Download 7zip here for free

<https://www.7-zip.org/>


Adjust the sensitivity of tracking sensor modules.

Turn on and hold the car and adjust the potentiometer on the tracking sensor with cross screwdriver until you get the best sensitivity status: the signal indicate LED light will turn off when sensor is above white ground, and the signal LED will turn on when the sensor is above black track.


Step 1: Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from <https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

Step 2: Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson3.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson3.zip) , unzip the download zip file m2-lesson3.zip, you will see a folder called m2-lesson3 .

Step 3: Connect Mega2560 board to PC with USB cable, Open Arduino IDE -> click file -> click Open -> choose code “m2-lesson3.ino” in lesson folder, load the code into Arduino as following.

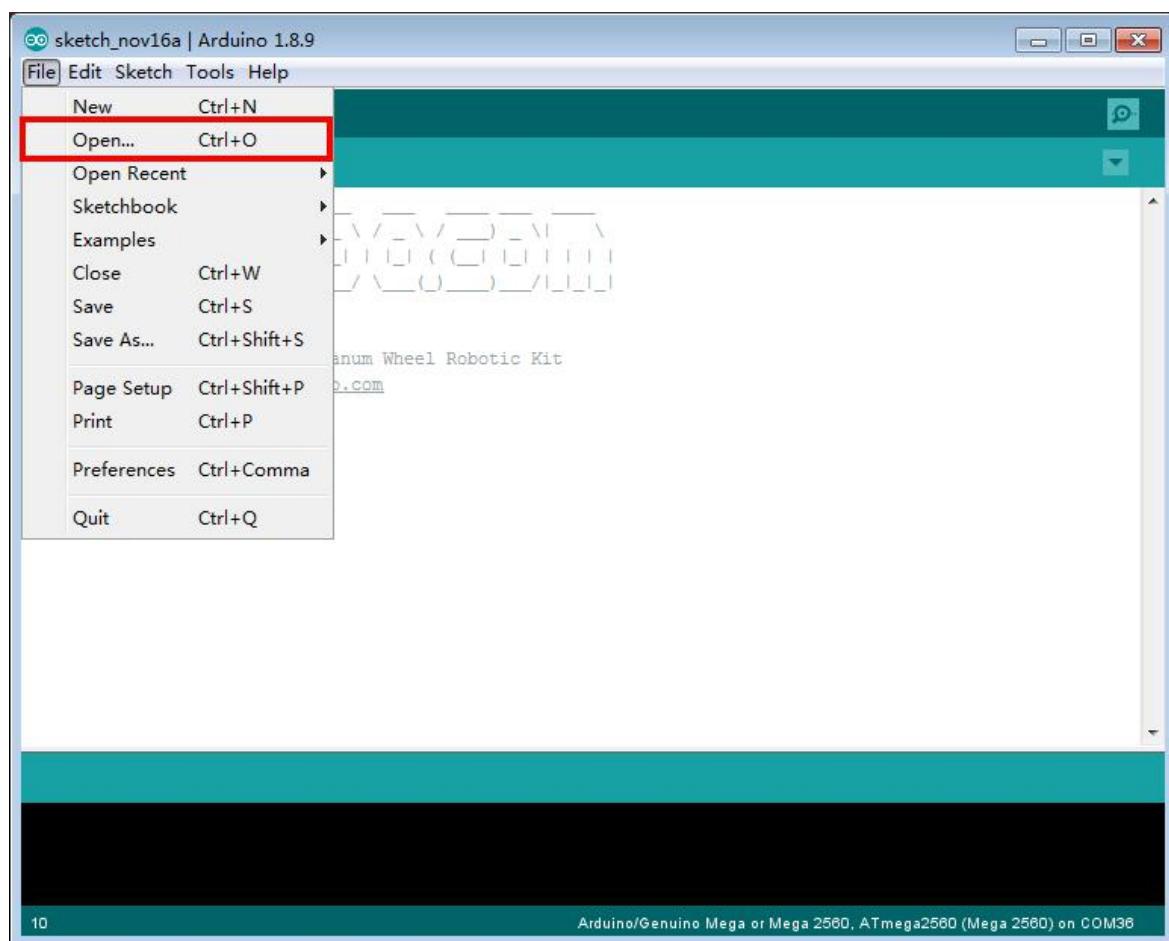


Step 4: Choose corresponding board/port for your project, upload the sketch to the board.

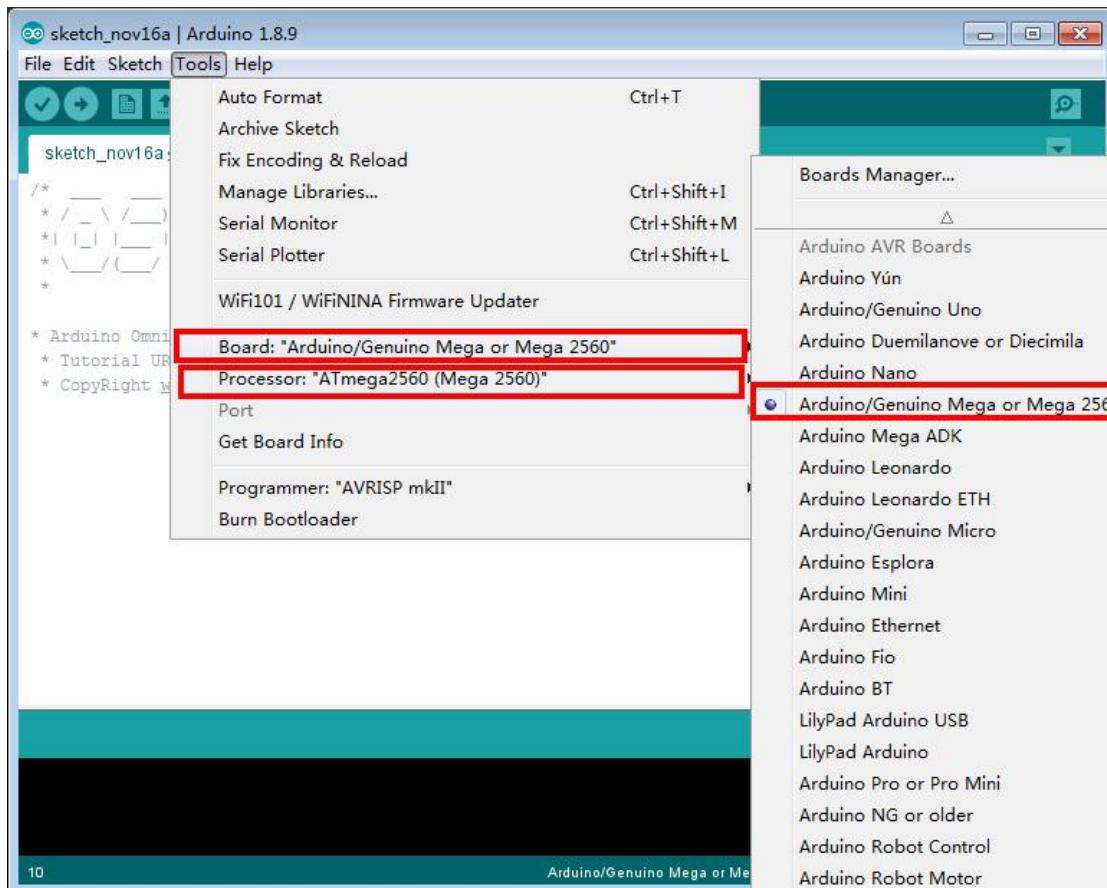

## Step 5: Adjust the sensitivity of tracking sensor modules.

Turn on and hold the car and adjust the potentiometer on the tracking sensor with cross screwdriver until you get the best sensitivity status: the signal indicate LED light will turn off when sensor is above white ground, and the signal LED will turn on when the sensor is above black track.

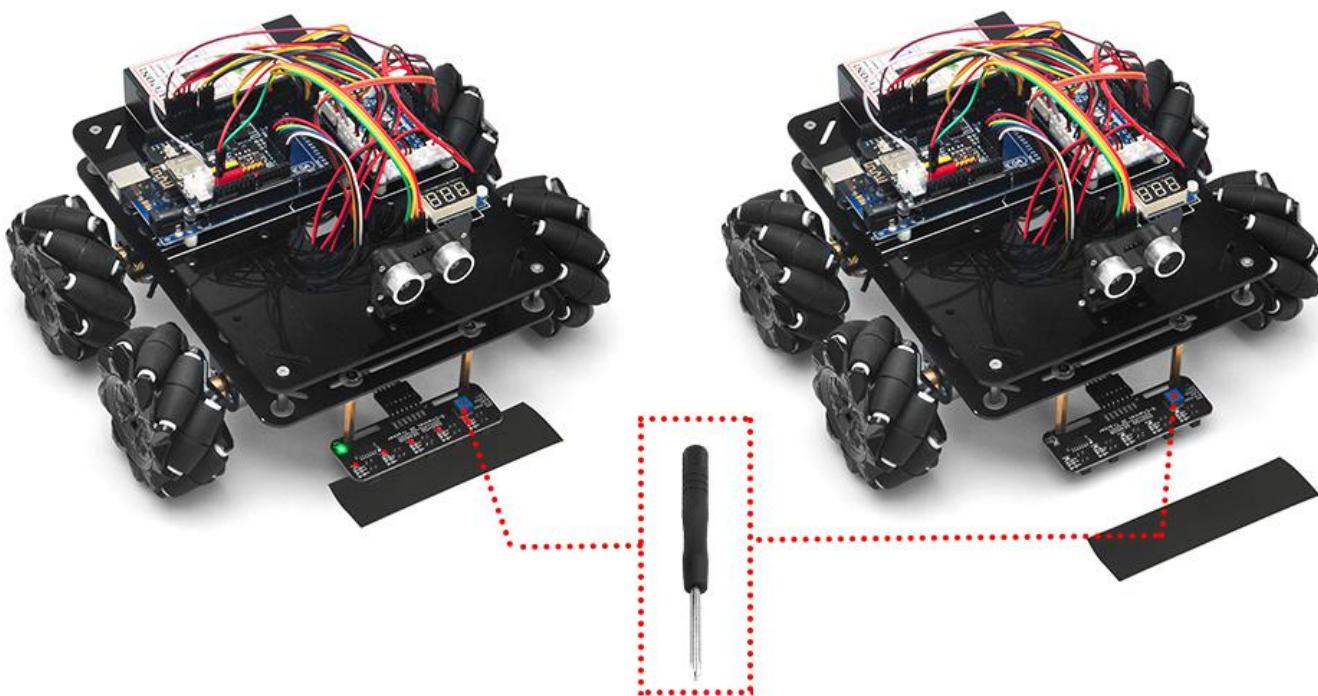

## HOW TO PLAY

Prepare a black track (the width of the black track must be between 20mm and 30mm) in white ground. Please be noted that the bend angle of track can't be too sharp otherwise the car will move out of the track.

Turn on the car and put the middle of tracking sensor module facing over black track, and then the car will move along the black track automatically.

Motor Speed Tuning for better tracking performance

To get better tracking performance result, motor power(speed) value should be adjusted properly as per battery level. If motor power(speed) value is too high, your car might run too fast and easy to get out of track. If motor power(speed) is too low, the car might not even move.

To adjust the motor power value, you need change the 3 constants : MID\_SPEED, HIGH\_SPEED,LOW\_SPEED in line 14,15,16 in m2-lesson3.ino sketch file. Their default values are 100,120,80 which are good when batteries are fully charged.

After batteries are running low, you might need to increase the value of these 3 constants. You can gradually add or reduce 10 each time on these values and compare which values have best tracking performance.

# Lesson 4 Bluetooth Controlled Imitation Driving

## OBJECTIVE

M

Mecanum Omni wheel is a very powerful wheel technology which allows robot car make omni-directional movement ( parallel shift to left and right).

In this project, we will show how to use Arduino to control an Osoyoo Brand mecanum wheel robot car.

## PARTS & DEVICES

OSOYOO Mecanum Wheels Robotic Car Chassis x 1 (2xleft-wheels/2xright-wheels and Motor x 4)

OSOYOO Mega2560 board fully compatible with Arduino x 1

OSOYOO WiFi shield x 1

OSOYOO Model Y motor driver x 1

OSOYOO MG90 servo motor x 1

OSOYOO Ultrasonic sensor module x1

OSOYOO Ultrasonic mount holder

OSOYOO Battery box x 1

OSOYOO 3pin female to female jumper wire x1

OSOYOO 6pin male to female jumper wire x2

OSOYOO 2 pin XH.25 female to female x1

OSOYOO 10 pin jumper wire male to female x1

18650 Batteries (3.7V) x 2

## HARDWARE INSTALLATION

You must complete [lesson 1 \(assembling the car\)](#) before you continue on with this lesson. No need change anything, just keep the hardware wire connection as it is.



## CIRCUIT CONNECTION

**STEP1:** Connect B\_TX and B\_RX to D19 and D18.


(Note: You need split 2 pcs of male-to-female jumper wires from our 10-pc jumper wire bundle. Any color from the bundle will be ok. The rest of wires are as spare parts for potential broken or damaged wires.)

Wifi Board	Arduino mega2560
B_TX	D19
B_RX	D18

2pin male to female wire

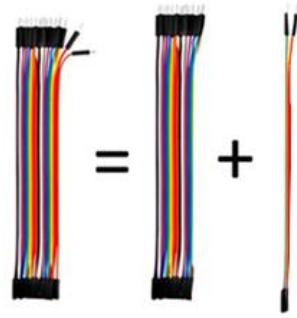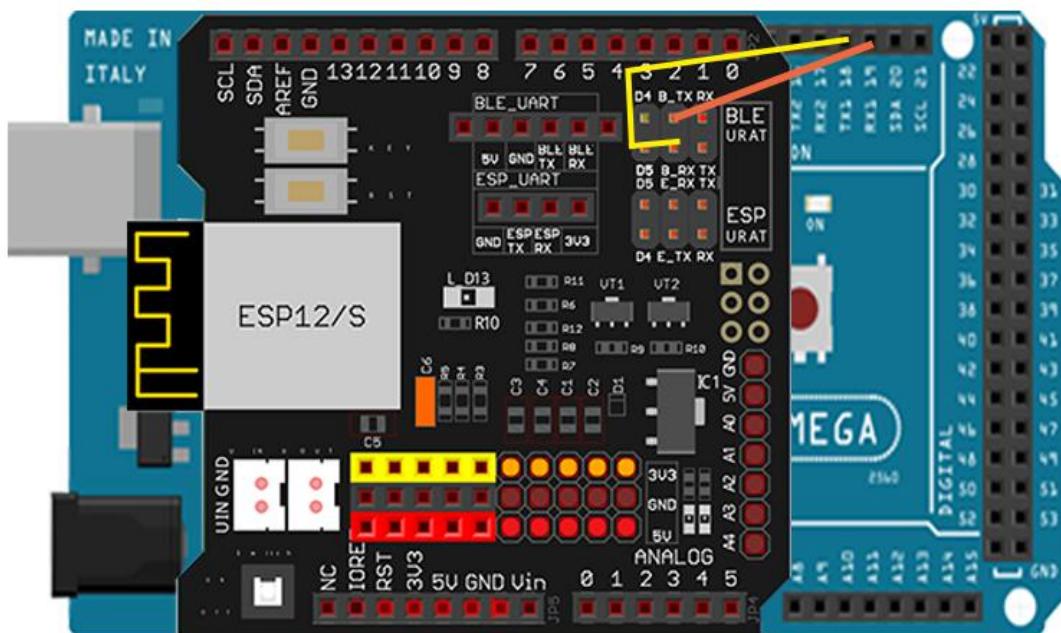

**STEP2:** Bluetooth Module should be inserted into bluetooth 6-pin slot in OSOYOO WiFi Board

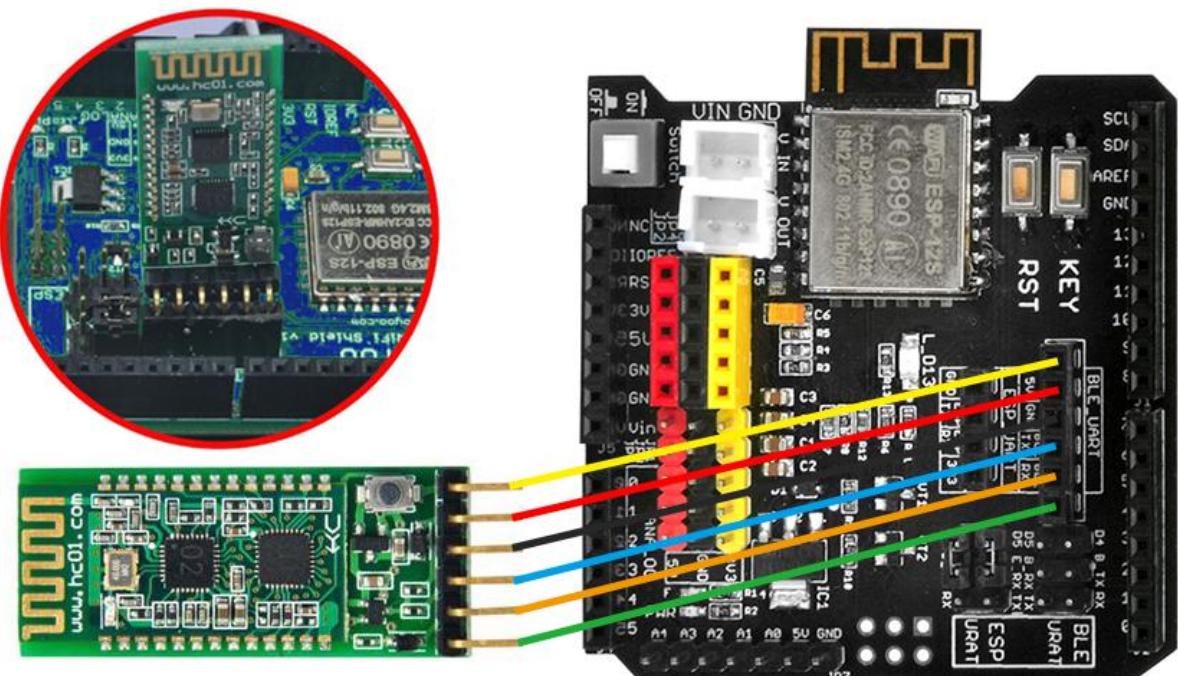

## SOFTWARE INSTALLATION

Open-source Arduino Software(IDE)



Download Arduino IDE here:  
<https://www.arduino.cc/en/Main/Software?setlang=en>

7 zip is a free zip utility that un-zips zip files




Download 7zip here for free  
<https://www.7-zip.org/>


**Step 1:** Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from <https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

**Step 2:** Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson4.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson4.zip), unzip the download zip file m2-lesson4.zip, you will see a folder called m2-lesson4 .

**Step 3:** Connect mega2560 board to PC with USB cable, Open Arduino IDE -> click file -> click Open -> choose code “lesson4.ino” in lesson4 folder, load the code into arduino.

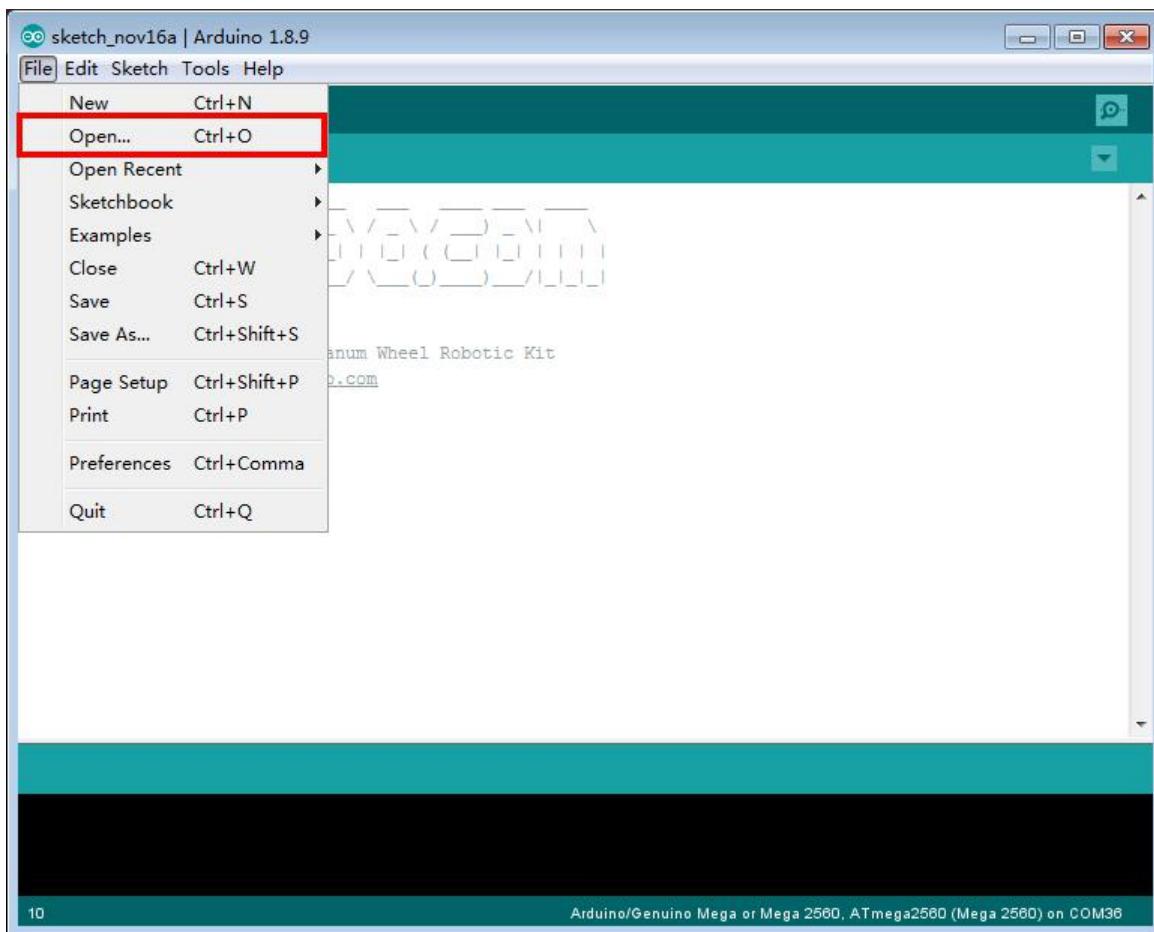


#### Step 4: Choose corresponding board/port for your project, upload the sketch to the board.

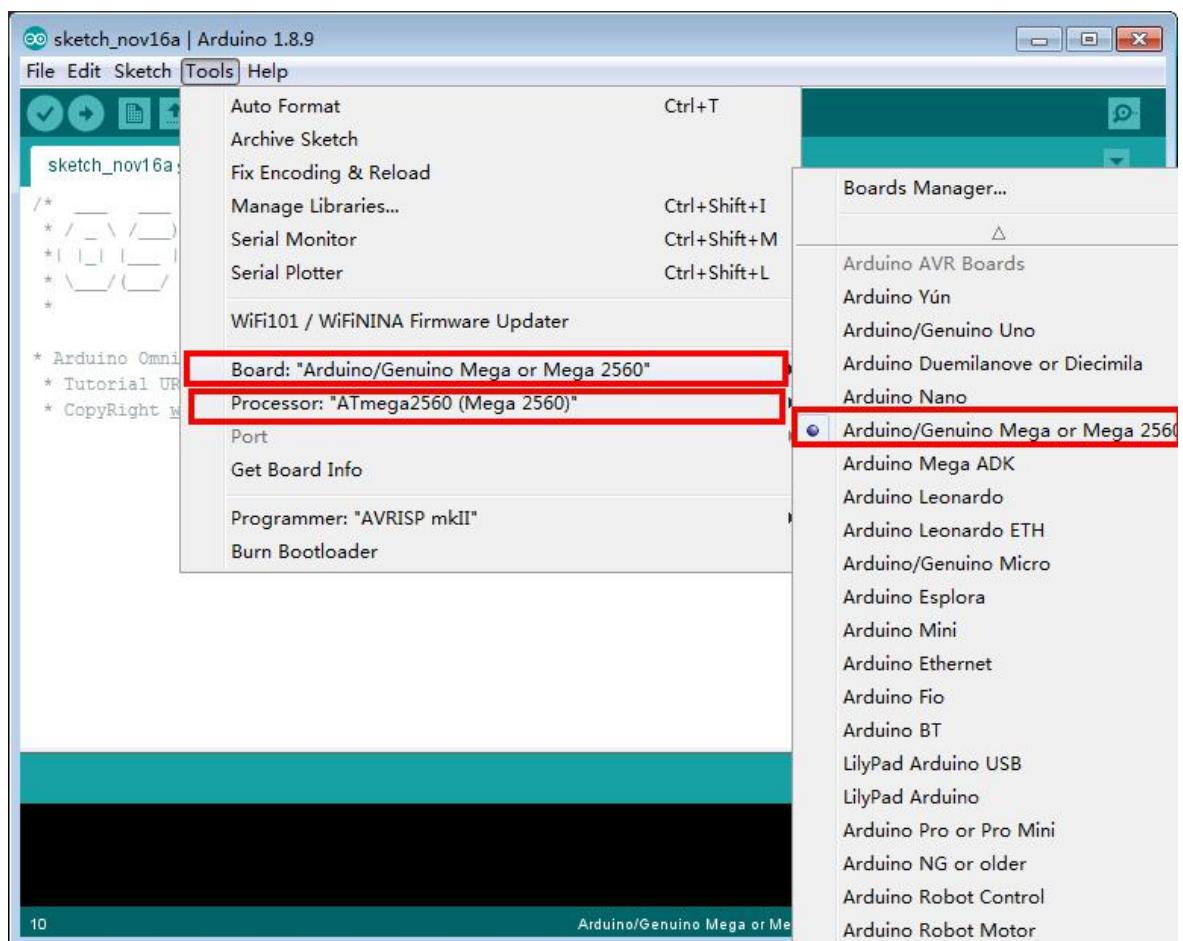

#### Mobile APP:

Go to your Google Play or Apple APP store and search APP name “OSOYOO imitation driving”, Download the APP as following and install it in your smart phone.



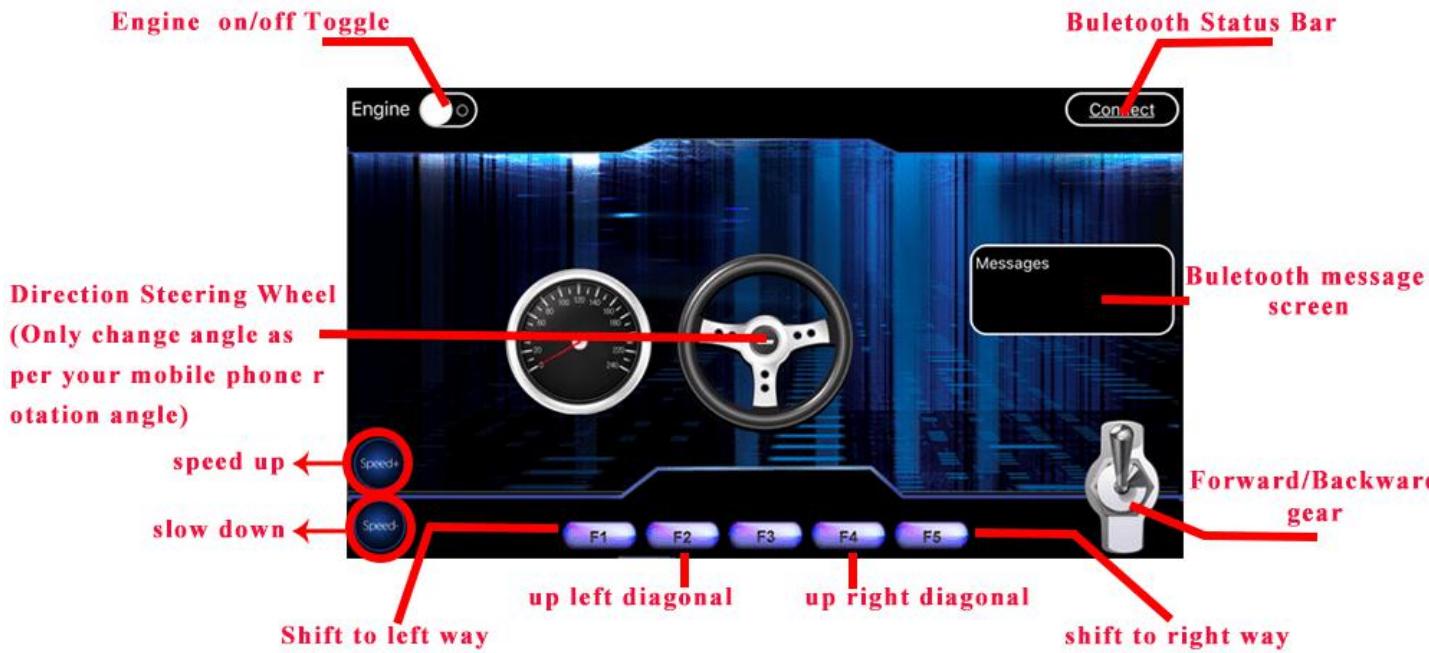

## HOW TO PLAY

Power on the robot, and open APP.

- 1) If you have not paired Bluetooth module with your cell phone, please pair the bluetooth module first before open the APP. In your cell phone Setting-> Bluetooth ,find a Bluetooth device called **HC02**, pair it with password 1234
- 2) After bluetooth HC02 device is paired, open the APP. If you are using Android APP, Click **BT Search** Button to connect APP to HC02 device, if it is iOS APP, just click **connect**
- 3) Click Engine Switch to start/stop the car
- 4) Click Speed +/- button to accelerate or reduce speed
- 5) Rotate the mobile phone to change direction (steering wheel will rotate while you are turning the phone).
- 6) Click Gear button to change gear to Forward or Backward direction.
- 7) Press F1 to Shift to left way, F5 to shift to right way, F3 to up left diagonal, F4 to up right diagonal.

## NOTICE

### Motor Speed Tuning for better performance

To get better running performance result, motor power(speed) value should be adjusted properly as per battery level. If motor power(speed) value is too high, your car might run too fast and easy to out of control. If motor power(speed) is too low, the car might not even move.

To adjust the motor power value, you need change the 3 constants line 27,28,29 in mecanum-2560-lesson4.ino sketch file:

```
#define MIN_SPEED 50
#define TURN_SPEED 70
#define SLOW_TURN_SPEED 50
#define BACK_SPEED 60
```

MIN\_SPEED is the minimum power required to start the car. If when APP engine toggle is switched to RED, but your car does not move, you need increase this value , if the car runs too fast at engine start moment, you need reduce this value.

TURN\_SPEED AND, SLOW\_TURN\_SPEED value determines the turning speed of your car. If your car turning too fast, you need reduce these two values, if turning too slow or not turning, increase these two values. Always make

SLOW\_TURN\_SPEED about 20 to 30 lower than TURN\_SPEED value.

BACK\_SPEED value determines the reverse back running speed.

After batteries are running low, you might need to increase the value of these 3 constants. You can gradually add or reduce 10 each time on these values and compare which values have best tracking performance.

# Lesson 5 Wifi Controlled Robot Car

## OBJECTIVE

In this project we will connect Robot Car to Wifi and Use an APP to control the car through Internet. This is a typical Internet of Things (IoT) Application.

## PARTS & DEVICES

OSOYOO Mecanum wheels robotic car chassis x 1 (2x left-wheels/2x right-wheels and Motor x 4)

OSOYOO Mega2560 board fully compatible with Arduino x 1

OSOYOO WiFi shield x 1

OSOYOO Model Y motor driver x 1

OSOYOO MG90 servo motor x 1

OSOYOO Ultrasonic sensor module x1

OSOYOO Ultrasonic mount holder

OSOYOO 5-Point Tracking sensor module

OSOYOO 3pin female to female jumper wire x1

OSOYOO 6pin male to female jumper wire x2

OSOYOO 7pin female to female jumper wire x1

OSOYOO 2 pin XH.25 female to female x1

OSOYOO Battery box x 1

18650 Batteries(3.7V) x

## HARDWARE INSTALLATION

2

If you just finishes all [lesson 1](#) (assembling the car) and [lesson 4](#) (bluetooth imitation driver), please keep all lesson connections same as it is. Then plug out bluetooth from Wifi Shield.

## CIRCUIT CONNECTION



**Remove the connection B\_TX to D18 and B\_RX to D19.**

**Connect E\_RX to D18(TX1) and E\_TX to D19(RX1).**

*(Note: You need split 2 pcs of male-to-female jumper wires from our 10-pc jumper wire bundle. Any color from the bundle will be ok. The rest of 8 pcs wires are as spare parts for potential broken or damaged wires.)*

Wifi Board	Arduino mega2560
E_TX	D19
E_RX	D18

2pin male to female wire

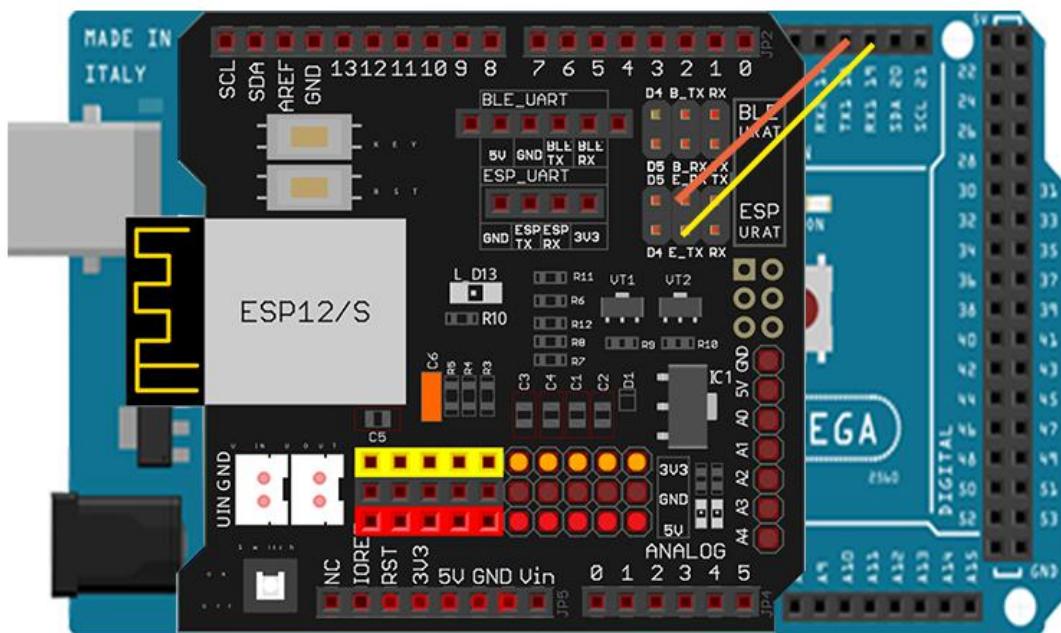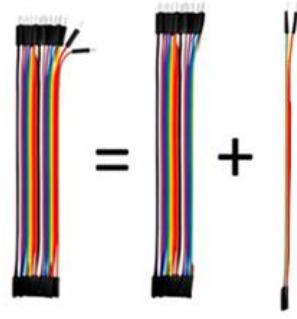

## SOFTWARE INSTALLATION

Open-source Arduino Software(IDE)



Download Arduino IDE here:

<https://www.arduino.cc/en/Main/Software?setlang=en>

7 zip is a free zip utility that un-zips zip files




Download 7zip here for free

<https://www.7-zip.org/>

**Step 1:** Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from

<https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

**Step 2:** Please download the library zip file from [WiFiEsp-master.zip](#) .Open Arduino IDE ->click Sketch ->Include Library ->Add .ZIP library , then load above zip file into Arduino.

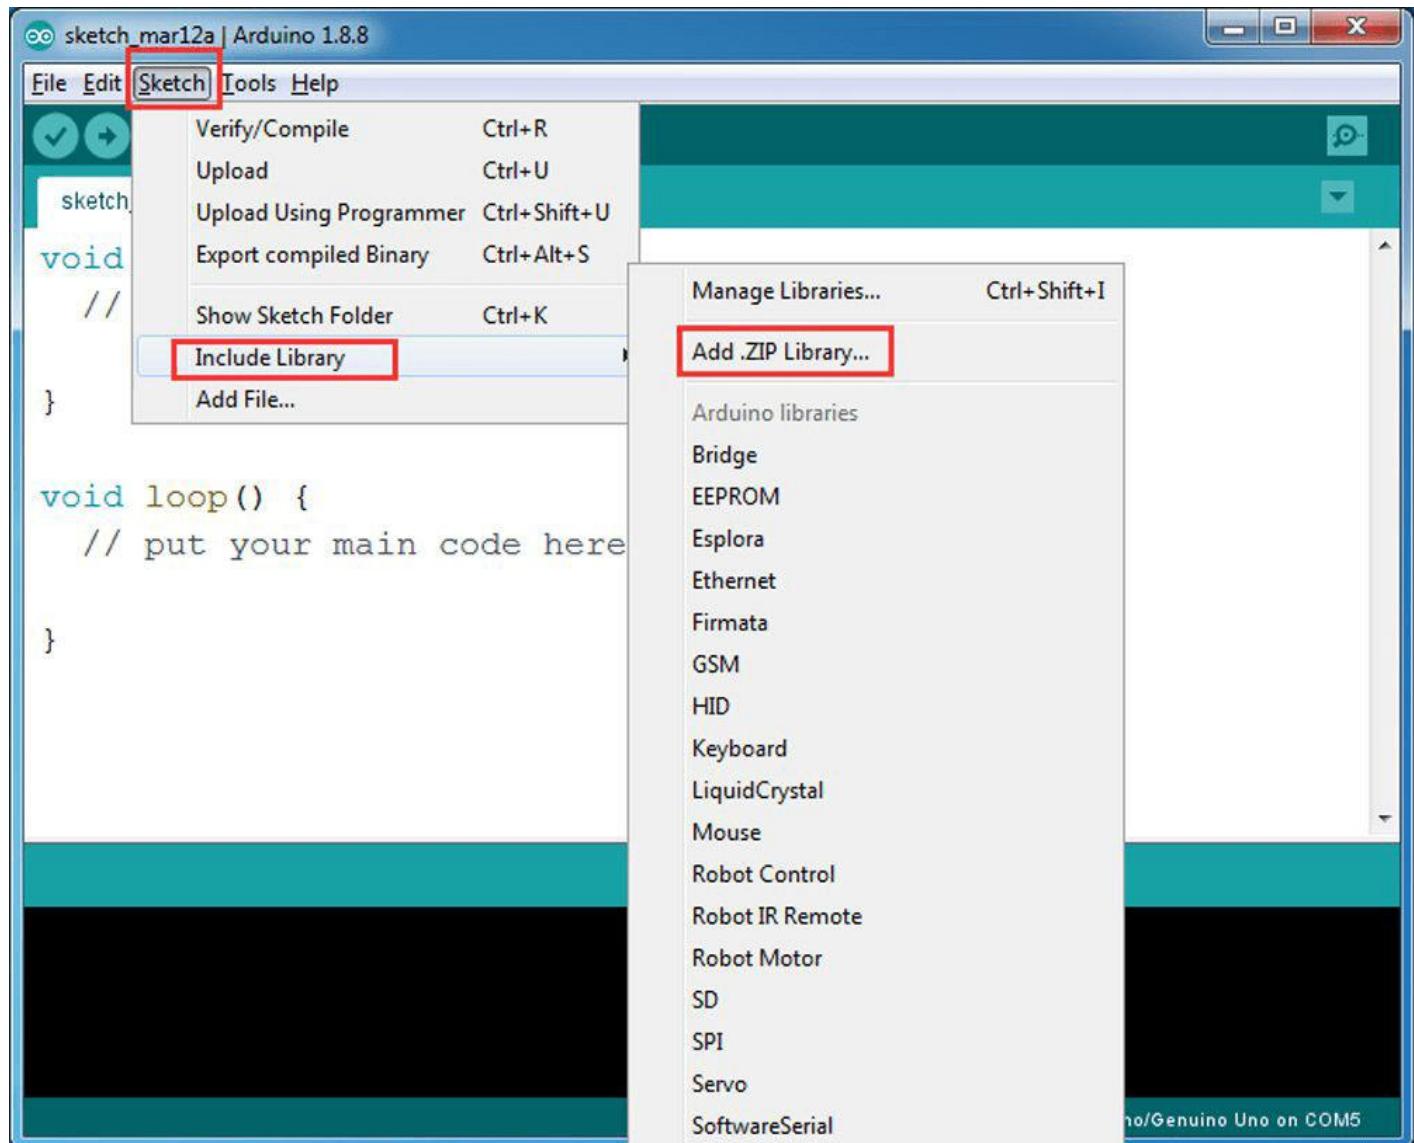

**Step 3:** APP installation-you need search “OSOYOO Wifi UDP Robot Car Controller ” in Google Play or Apple Store, and then install this APP. **DOWNLOAD APP FROM <https://osoyoo.com/driver/arduino-udp/udp-robot.apk>**

# Android Phone



# Apple iOS



YOU CAN ALSO DOWNLOAD APP DIRECTLY FROM  
<https://osoyoo.com/driver/arduino-udp/udp-robot.apk>

#### Step 4: Arduino Sketch code Installation:

Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson5.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson5.zip)

Unzip the downloaded file, enter the m2-lesson5 folder, you will see two sub-folder : m2-lesson5A and m2-lesson5B. These two folders have program for two Wifi modes: AP mode and STA mode. The Arduino sketches for these two modes are different. Let's explain these two modes one by one.

#### \*AP MODE\*

When working in AP mode, our robot car itself will become a Wifi Hot Spot. Our cell phone can connect to Robot Car as its wifi client. The IP address of Robot is fixed as 192.168.4.1 and It is not connected to WAN.

(1) Unzip the **m2-lesson5** file and you will see a folder named m2-lesson5a, upload the code into Arduino.

(2) Open your Arduino Serial monitor, and you will see a similar result as AP mode. A new Wifi SSID “osoyoo\_robot” with IP address 192.168.4.1 will show up in the window.

This means your Robot car has a Wifi Hot Spot name “osoyoo\_robot” , its IP address is 192.168.4.1

File Edit Sketch Tools Help

COM260

[WiFiEsp] Initializing ESP module  
 [WiFiEsp] Initialization successful - 1.5.4  
 Attempting to start AP osoyoo\_robot  
 [WiFiEsp] Access point started osoyoo\_robot  
 You're connected to the network  
 SSID:  
 IP Address: 192.168.4.1

To see this page in action, open a browser to <http://192.168.4.1>

[WiFiEsp] Server started on port 80


Autoscroll  Show timestamp  Newline  9600 baud  Clear output

Done uploading.


Sketch uses 13580 bytes (5%) of program storage space. Maximum is 253952 bytes.  
 Global variables use 899 bytes (10%) of dynamic memory, leaving 7293 bytes for local variables. Maximum is 8192 bytes.

6 Arduino Mega or Mega 2560 on COM260

(3) Now your Robot car become a Wifi Hot Spot and set IP address as “192.168.4.1” to your APP Setting section. Port number keep default value **8888**.

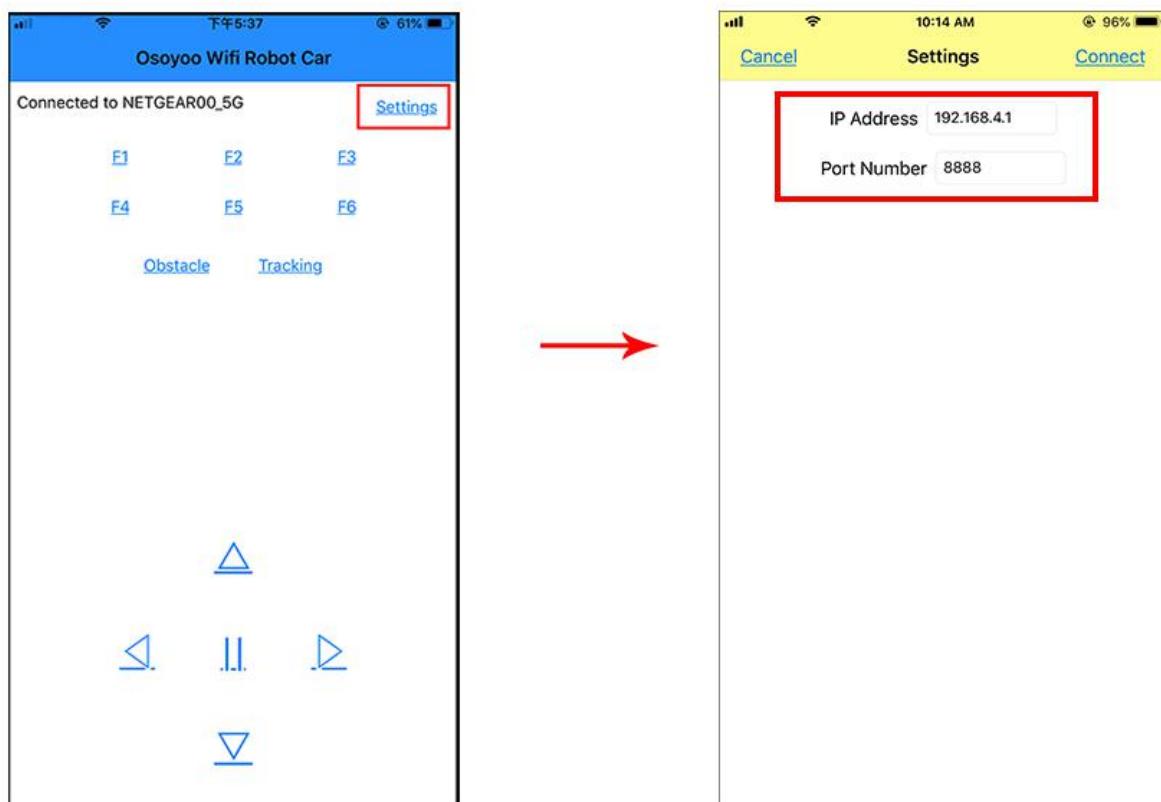

(4) Connect your cell phone to “osoyoo robot” WiFi hotspot, you can use Mobile phone control the robot car.

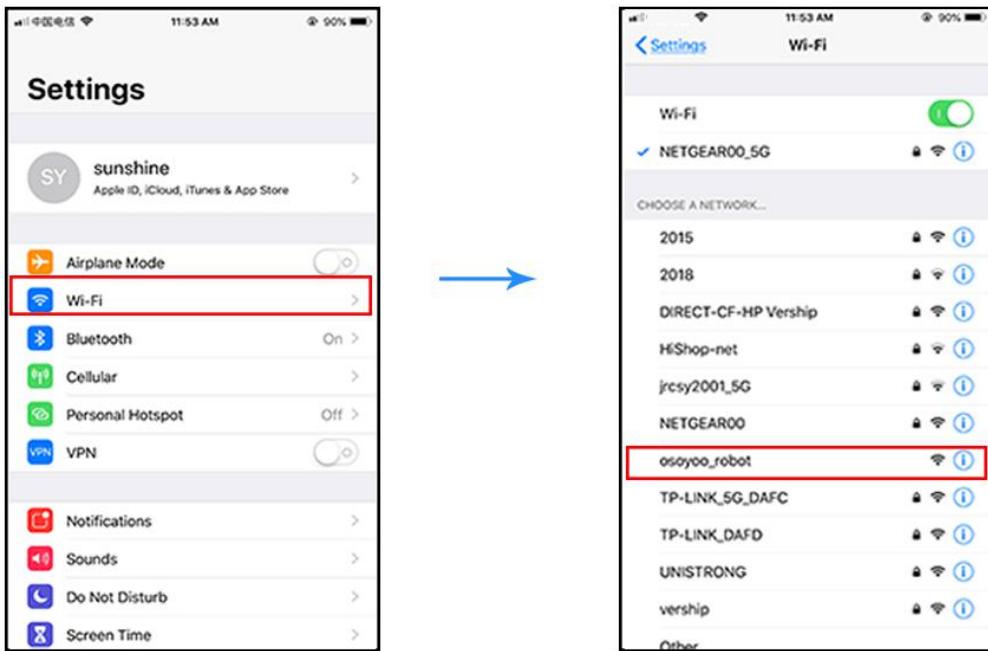

(5) You can click the **◀ ▶ ▲ ▼** direction keys to make the car move. Use “||” pause key to stop the car movement.

Click Obstacle to shift left side, Click Tracking to shift right side.


Click F1 to make upper-left diagonal movement, Click F3 to make upper-right diagonal movement.

Click F4 to make back-left diagonal movement, Click F6 to make back-right diagonal movement.

### —\*STA MODE\* —


In STA mode, robot car does not work as a wifi hotspot. Instead, it will become an internet node in your LAN. You need tell Arduino sketch what is your local router's Wifi SSID and password, then Arduino talks to router and get its own LAN IP address from DHCP server. You can use Mobile APP to access the robot car's IP address and control its movement.

(1) Unzip the **m2-lesson5** file and you will see a folder named **m2-lesson5b**, then load the **m2-lesson5b.ino** code into Arduino.

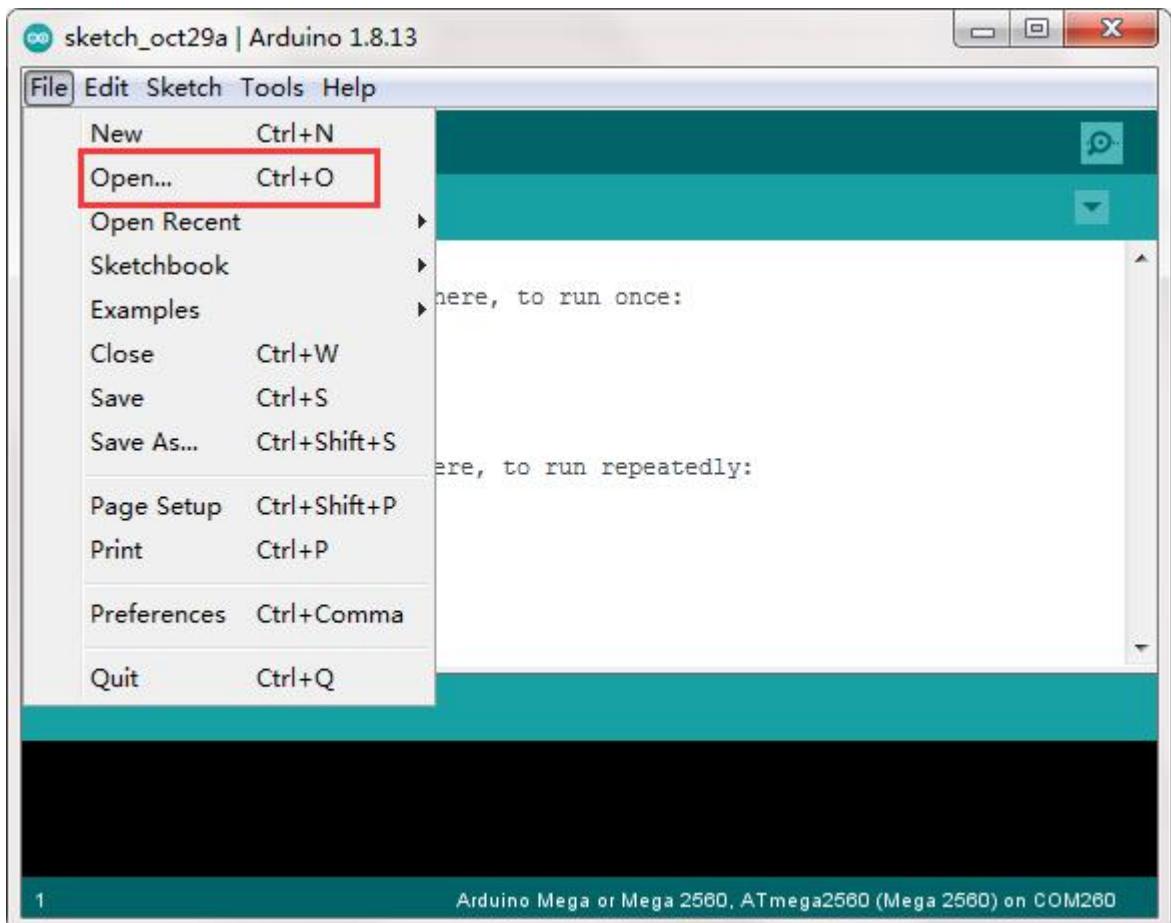

(2) You need change the code Line 180 and Line 181 :

```
char ssid[] = "YOUR_ROUTER_SSID"; // replace this with your router wifi SSID  
char pass[] = "YOUR_ROUTER_WIFI_PASSWORD"; // replace with  
your wifi password
```

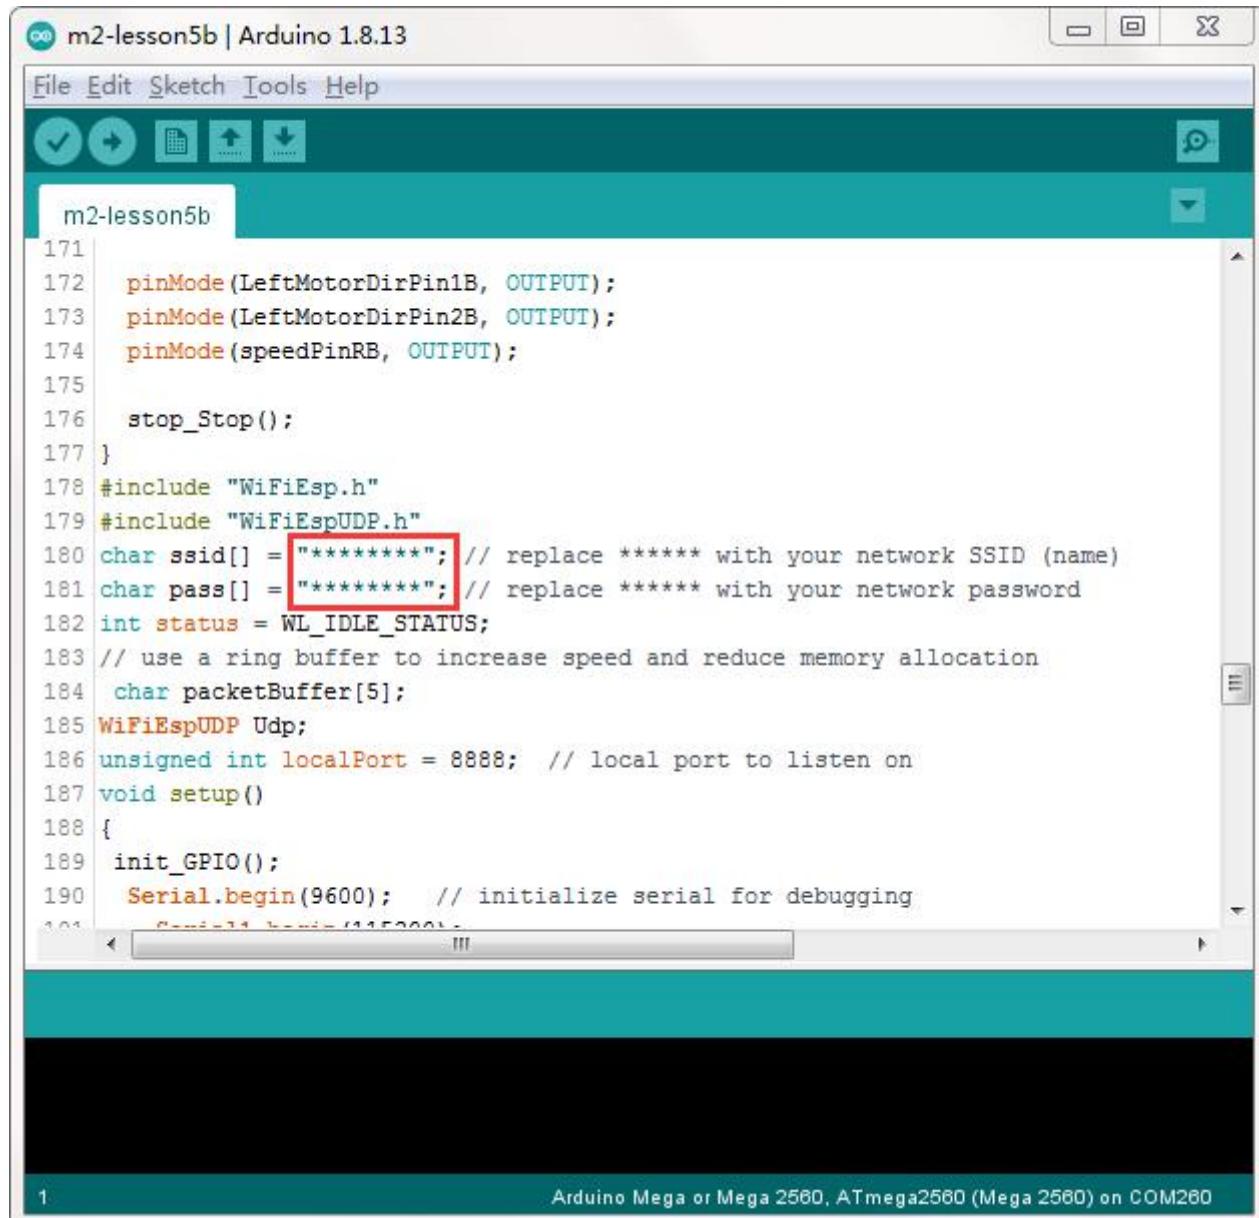

The screenshot shows the Arduino IDE interface with the sketch 'm2-lesson5b' open. The code editor displays the following C++ code:

```
171
172 pinMode(LeftMotorDirPin1B, OUTPUT);
173 pinMode(LeftMotorDirPin2B, OUTPUT);
174 pinMode(speedPinRB, OUTPUT);
175
176 stop_Stop();
177 }
178 #include "WiFiEsp.h"
179 #include "WiFiEspUDP.h"
180 char ssid[] = "*****"; // replace ***** with your network SSID (name)
181 char pass[] = "*****"; // replace ***** with your network password
182 int status = WL_IDLE_STATUS;
183 // use a ring buffer to increase speed and reduce memory allocation
184 char packetBuffer[5];
185 WiFiEspUDP Udp;
186 unsigned int localPort = 8888; // local port to listen on
187 void setup()
188 {
189 init_GPIO();
190 Serial.begin(9600); // initialize serial for debugging
```

The lines of code at the top of the code block, specifically the two lines that define the SSID and password for the WiFi connection, are highlighted with a red rectangular box.

(3) Upload the sketch to Arduino. click the Serial monitor window in upper right corner of Arduino IDE, you will see following result:

m2-lesson5b | Arduino 1.8.13

File Edit Sketch Tools Help

COM260

```

171
172 pinMod
173 pinMod
174 pinMod
175
176 stop_S
177 }
178 #include
179 #include
180 char ssi
181 char pas
182 int stat
183 // use a
184 char pa
185 WiFiEspU
186 unsigned
187 void set
188 {
189 init_GP
190 Serial

```

[WiFiEsp] Initializing ESP module  
 [WiFiEsp] Initialization successful - 1.5.4  
 Attempting to connect to WPA SSID: NETGEAR00  
 [WiFiEsp] Connected to NETGEAR00  
 You're connected to the network  
 SSID: NETGEAR00  
 IP Address: 192.168.50.44

To see this page in action, open a browser to <http://192.168.50.44>  
 Listening on port 8888


Autoscroll  Show timestamp Newline 9600 baud Clear output

Sketch uses 13542 bytes (5%) of program storage space. Maximum is 253952 bytes.  
 Global variables use 915 bytes (11%) of dynamic memory, leaving 7277 bytes for local variables. Maximum is 8192

181 Arduino Mega or Mega 2560 on COM260

(4) In this mode, you will see an IP address which is our LAN IP address assigned by my router.

Please write down this IP address and click Setting to set up robot IP address and set this IP address to your APP Setting section (no need change default port 80 in APP).

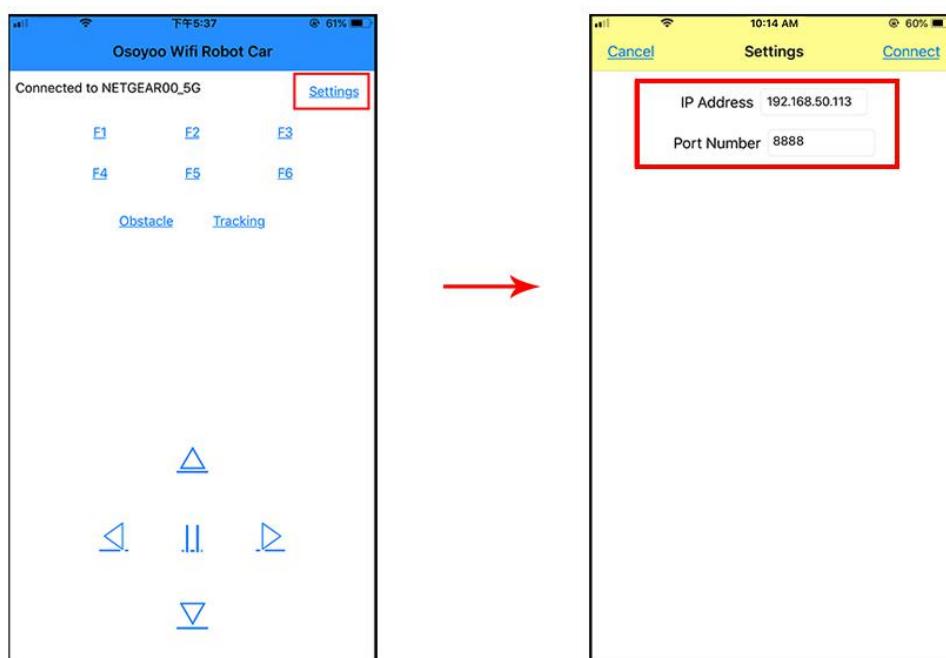

(5) Now your Robot car is connected to your LAN, you can use Mobile phone under same LAN

to control the robot car.

If your APP is in WAN, you need to go to your Router Control Panel, forward Port 80 to Robot car LAN IP address, then you can use Router IP to control the car. This feature makes our robot car A REAL INTERNET OF THING device

(6) You can click the **◀ ▶ ▲ ▼** direction keys to make the car move. Use “**||**” pause key to stop the car movement.

Click Obstacle to shift left side, Click Tracking to shift right side.

Click F1 to make upper-left diagonal movement, Click F3 to make upper-right diagonal movement.

Click F4 to make back-left diagonal movement, Click F6 to make back-right diagonal movement.

## NOTICE

### FAQ about the Wifi UDP APP and sketch Code:

**Q1) How to tune the robot car speed?**

**A:** If you want change the speed performance of the robot car, please following parameters in line 11 to 13:

```
#define SPEED 85
#define TURN_SPEED 90
#define SHIFT_SPEED 130
```

SPEED value determines forward moving speed

TURN\_SPEED value determines turning speed

SHIFT\_SPEED value determines parallel shifting speed

**Q2) What happened when you press buttons in OSOYOO WiFi UDP Robot Car APP ?**

**A:** When you press a button of the APP, APP will send a single-letter message through UDP protocol to target device (in this example, our Arduino Wifi Shield)

Button	UDP message
F1	F
F2	G
F3	H
F4	I
F5	J
F6	K
▲	A
▼	B
▶	R
◀	L
square	E
obstacle	O
tracking	T

### Q3) How does Arduino handle the UDP command?

**A:** Line 230 to line 245 in m2-lesson5a.ino file are the codes which react to Cell phone command. For example, when ▲ is pressed, according to Q1 table, a letter “A” command was sent from Cell phone to Arduino. Line 233 case ‘A’ .... statement will make the car make car moving forward.

```

char c=packetBuffer[0];
switch (c)      //serial control instructions
{
    case 'A':go_advance(SPEED);;break;
    case 'L':left_turn(TURN_SPEED);break;
    case 'R':right_turn(TURN_SPEED);break;
    case 'B':go_back(SPEED);break;
    case 'E':stop_Stop();break;
    case 'F':left_shift(0,150,0,150);break; //left ahead
    case 'H':right_shift(180,0,150,0);break; //right ahead
    case 'T':left_shift(150,0,150,0); break;//left back
    case 'K':right_shift(0,130,0,130); break;//right back
    case 'O':left_shift(200,150,150,200); break;//left shift
    case 'T':right_shift(200,200,200,200); break;//left shift
    default:break;
}

```

# Lesson 6 Object follow Robot Car

## OBJECTIVE

In this lesson, we will install 2pcs IR distance sensors on a robot car and program the car to follow object movements. The car receives the signal from the IR distance sensors, and then the program will drive the car to take actions.

## PARTS & DEVICES

OSOYOO Mecanum wheels robotic car chassis x 1 (2x left-wheels/2x right-wheels and Motor x 4)

OSOYOO Mega2560 board fully compatible with Arduino x 1

OSOYOO WiFi shield x 1

OSOYOO Model Y motor driver x 1

OSOYOO IR Obstacle Sensor x 2

OSOYOO 3pin female to female jumper wire x1

OSOYOO 6pin male to female jumper wire x2

OSOYOO 7pin female to female jumper wire x1


OSOYOO 2 pin XH.25 female to female x1

OSOYOO Battery box x 1

18650 Batteries(3.7V) x 2

## HARDWARE INSTALLATION


In this lesson, we will install 2pcs IR distance sensors on a robot car and program the car to follow object movements. The car receives the signal from the IR distance sensors, and then the program will drive the car to take actions.

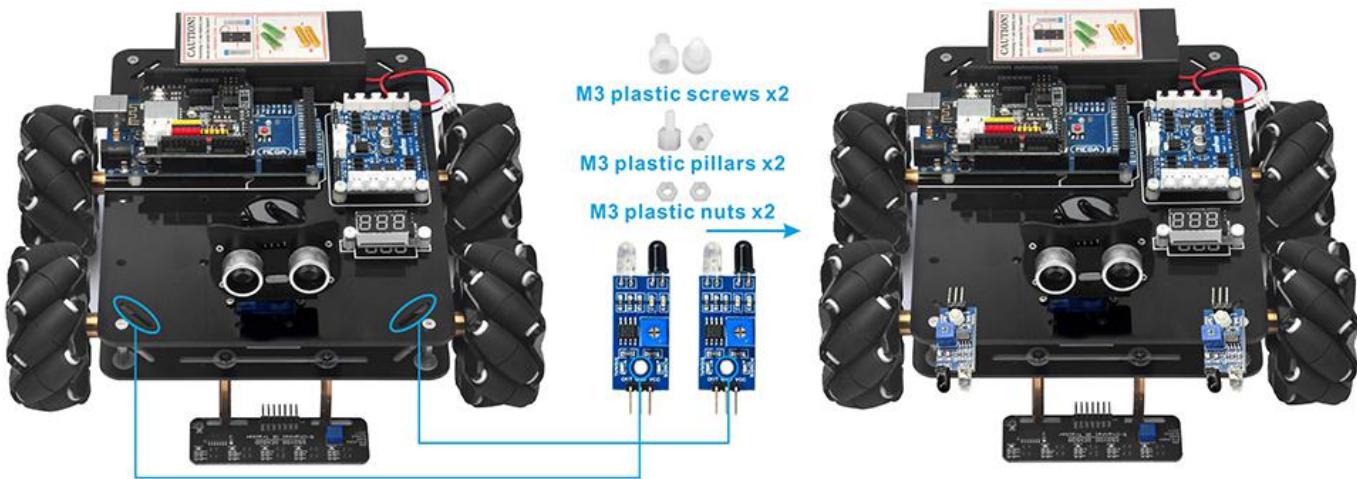

## CIRCUIT CONNECTION

You must complete lesson 1 (assembling the car) before you continue on with this lesson.

Install 2pcs IR distance sensors modules as below . (Remember : DO NOT remove any existing wires installed in Lesson 1)

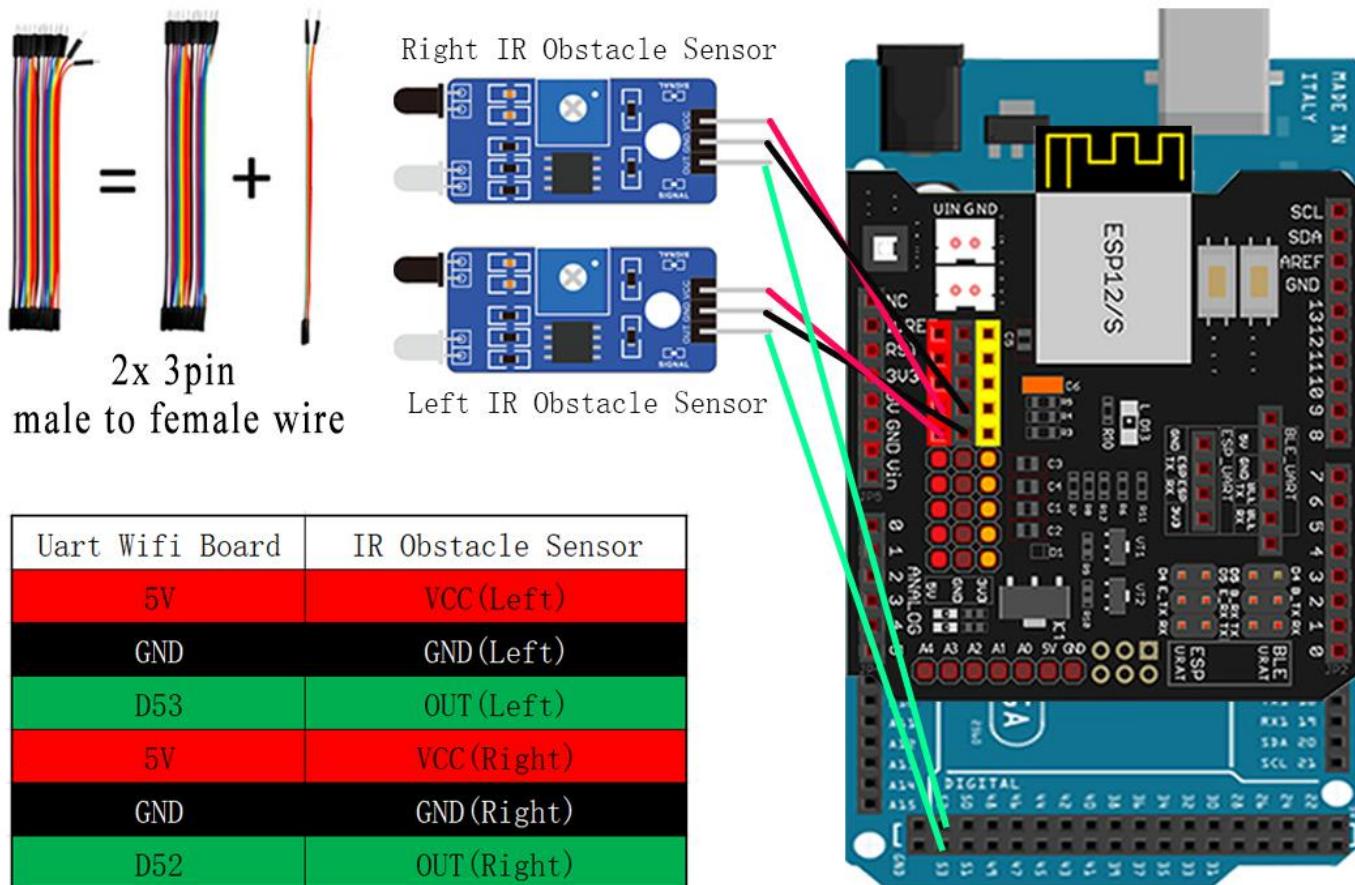


## SOFTWARE INSTALLATION

Open-source Arduino Software(IDE)		Download Arduino IDE here: <a href="https://www.arduino.cc/en/Main/Software?setlang=en">https://www.arduino.cc/en/Main/Software?setlang=en</a>
7 zip is a free zip utility that un-zips zip files		Download 7zip here for free <a href="https://www.7-zip.org/">https://www.7-zip.org/</a>


Step 1: Install latest Arduino IDE (If you have Arduino IDE version after 1.1.16, please skip this step). Download Arduino IDE from <https://www.arduino.cc/en/Main/Software?setlang=en> , then install the software.

Step 2: Download [https://osoyoo.com/driver/mecanum\\_metal\\_chassis\\_m2/m2-lesson6.zip](https://osoyoo.com/driver/mecanum_metal_chassis_m2/m2-lesson6.zip) , unzip the download zip file m2-lesson6.zip, you will see a folder called m2-lesson6 .

Step 3: Connect Mega2560 board to PC with USB cable, Open Arduino IDE -> click file -> click Open -> choose code “m2-lesson6.ino” in lesson folder, load the code into Arduino as following.

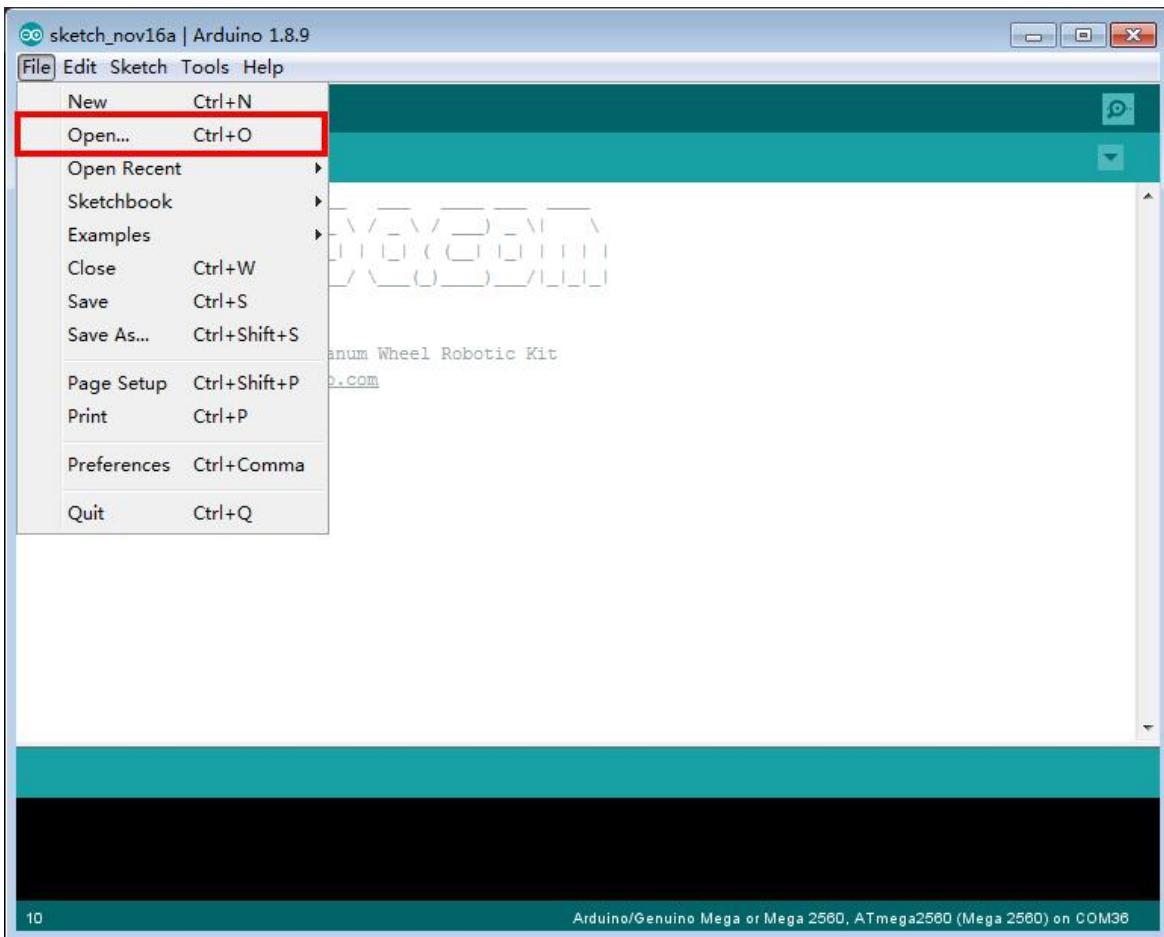

**Step 4:** Choose corresponding board/port for your project, upload the sketch to the board.

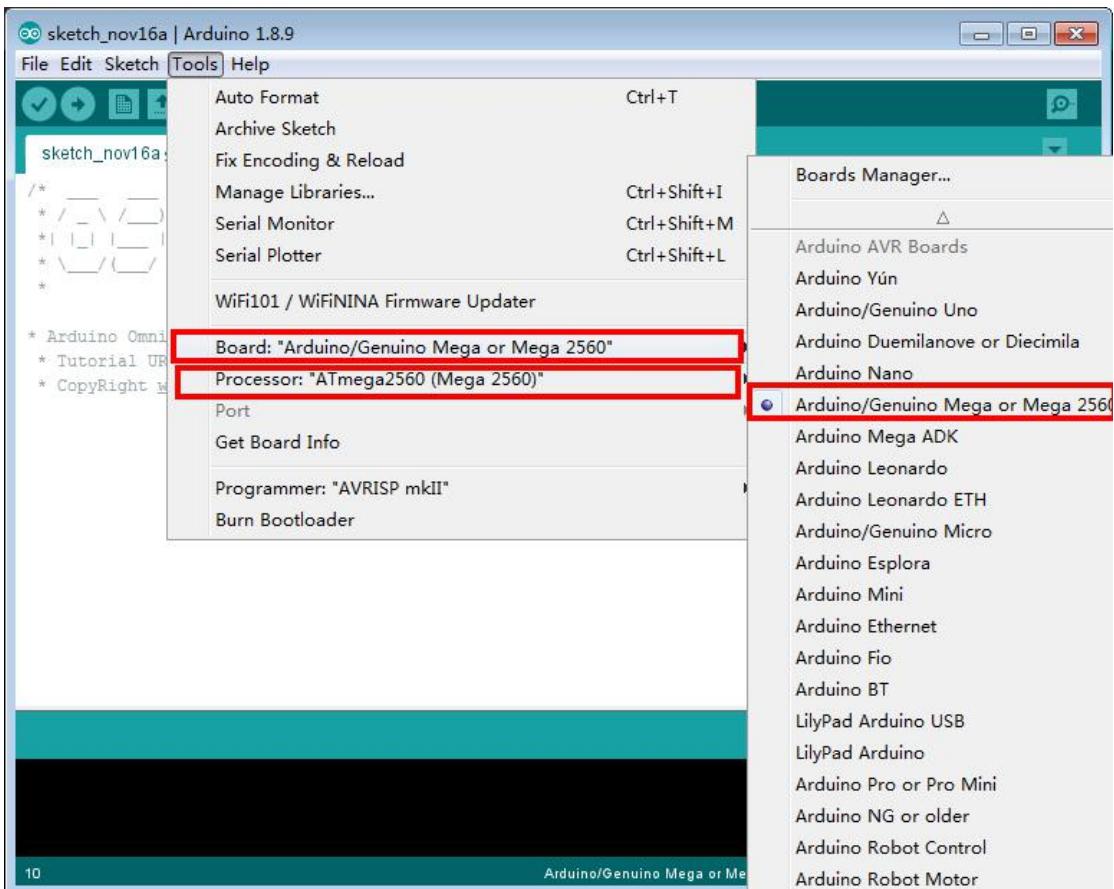

**Step 5:** Turn on the car, put object about 10 cm ahead of each IR distance sensors and adjust potentiometer on IR distance sensors to detect object or your hand.

Note: When these IR modules detect objects, both the power indicator and signal indicator are on. When No object is detected, only power indicator is on, signal indicator is off. If the signal indicator is always on even though there is no obstacle in front of the sensor, you need to adjust the potentiometer.

## HOW TO PLAY

Turn on the car, place your hand ahead of the car, then the car will move towards your hand as if you pull it. It goes forward when both IR Obstacle Avoidance modules detect your hand; it turns right if only the right IR Obstacle Avoidance module detects object; it turns left if only the left IR distance sensor detects object.

When your hand is over 10 cm ahead, it will stop.